


## Flat Deflection Bead

This simple solution prevents inside corner cracking when installed against a ceiling or concrete deck that may be subject to movement, to be used alongside backing materials in the head-of-wall gap for a code-compliant assembly. Its flexible gasket compresses and expands, providing protection for up to 1/2" of deflection, while its tear-off strip leaves a clean finished edge.



## Installation Guide

Technical Specs

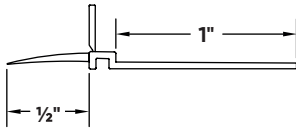

Scan Below for  
Installation Video



### Before Installation:

Hang drywall no more than 1/2" from the ceiling. Fill void with caulk or other cavity materials if necessary. Measure, cut and dry fit the bead.

### Step 1:

Coat both the bead and drywall with Trim-Tex 847 Spray Adhesive.

### Step 2:

Press the bead in place, applying pressure to the mud legs.


### Step 3:

Staple every 6"-8" using 1/2" staples.

### Step 4:

Finish with drywall compound. Remove tear-off strips prior to sanding.


### Step 1:

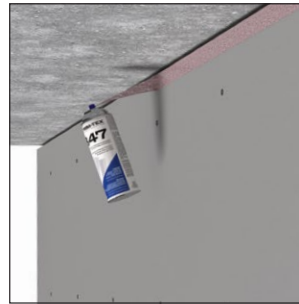

### Step 2:



### Step 3:

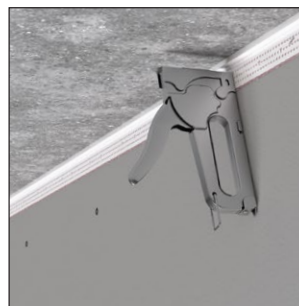

### Step 4:

