


## Flat Tear Away® L Bead

For finishing around building components like windows and doors, where the drywall is sometimes butted too close to slip a return leg behind it – or when backing materials, like acoustical sealant, have been added – Flat Tear Away can be a lifesaver. Its tear-off strip serves as a protective mask to create clean finished edges.



### Installation Guide

Technical Specs



Scan Below for  
Installation Video



#### Before Installation:

Measure, cut and dry fit the bead.

#### Step 1:

Coat the bead with Trim-Tex 847 Spray Adhesive. Press the bead in place, applying pressure to the mud legs.


#### Step 2:

Staple every 6"-8" using 1/2" staples.

#### Step 3:

Finish with drywall compound. Remove tear-off strips prior to sanding.

#### Step 1:

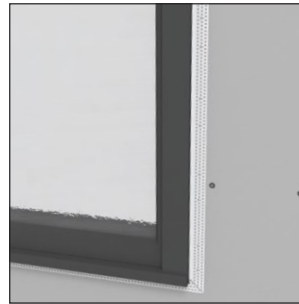

#### Step 2:



#### Step 3:

