


Mud On Ceiling Bead

The Mud On Ceiling Bead makes working with drywall and drop ceilings faster and easier than ever. Use this solution wherever a new wall butts up against an existing drop ceiling, with ceiling tiles resting on its vinyl flange. The tear-off protective masking protects the visible flange from joint compound and paint for easy clean-up.



Installation Guide

Technical Specs

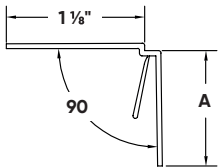

Before Installation:

Measure, cut and dry fit the bead.

Step 1:

Coat the bead with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.


Step 3:

Staple every 6"-8" using 1/2" staples.


Step 4:

Finish with drywall compound.


Step 1:

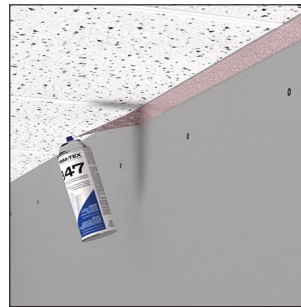

Step 2:

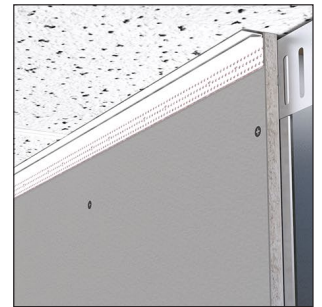

Step 3:

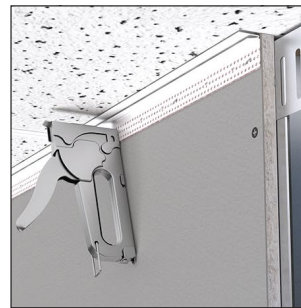

Step 4:

