




## Rigid Low Profile Archway

The Rigid Low Profile Archway is a variation on our standard 90-degree vinyl corner bead that requires less mud and no setback to finish. With its sharp rigid nose, this is a great choice for a level-five finish.

### Installation Guide

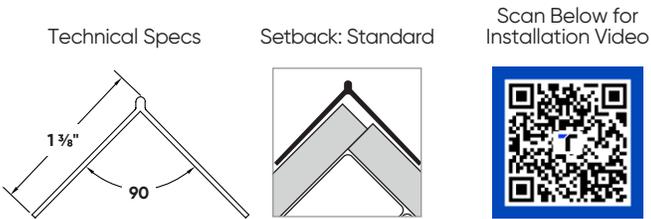

#### Before Installation:

Use minimal drywall setback on outside corners. Measure, cut and dry fit the bead, leaving a 1/2" gap at the floor.

#### Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

#### Step 2:

Press the bead in place, applying pressure to the mud legs.


#### Step 3:

Staple every 6"-8" using 1/2" staples. Note: for smaller arches, stapling each tab may be necessary.


#### Step 4:

Finish with drywall compound.


#### Step 1:

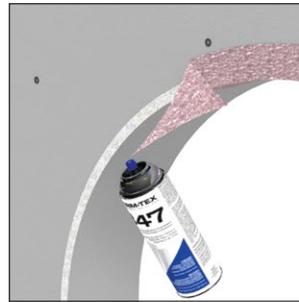

#### Step 2:

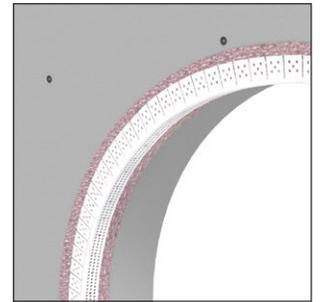

#### Step 3:

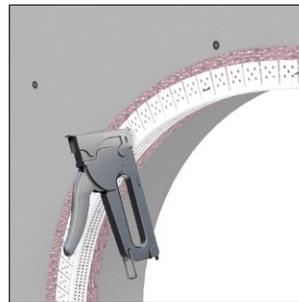

#### Step 4:

