


Super L Bead Archway

To save material and labor on larger surfaces of exposed drywall, like deep arched window returns, you can't beat the ease and efficiency of Super L Bead Archway. This solution boasts a super-wide $3 \frac{1}{8}$ " return leg, and is pre-scored at $2 \frac{5}{8}$ ", $2 \frac{1}{8}$ " and $1 \frac{5}{8}$ ", making the bead fit four sizes in one.



Installation Guide

Technical Specs

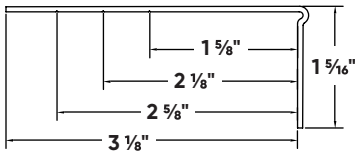

Scan Below for
Installation Video



Before Installation:

Measure, cut and dry fit the bead, leaving a $\frac{1}{16}$ " clearance at the ends.

Step 1:

Apply 2-3 beads of adhesive caulk to the return leg. Do not use construction/stud adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.


Step 3:

Staple every 6"-8" using $\frac{1}{2}$ " staples.


Step 4:

Finish with drywall compound.


Step 1:

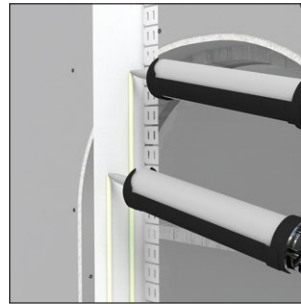

Step 2:

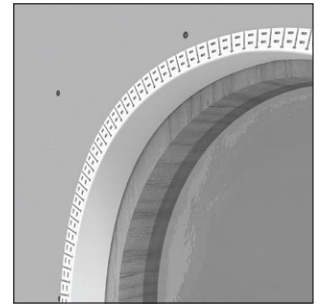

Step 3:

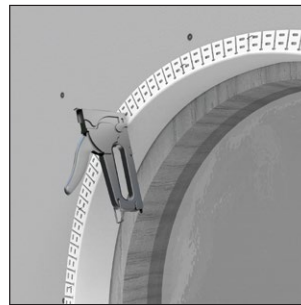

Step 4:

