


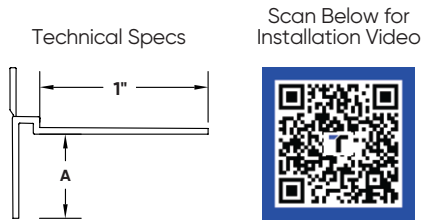

## Tear Away® L Bead

This is the gold standard for finishing drywall around windows, doors and other essentials. Tear Away Bead features a convenient tear-off strip, which acts as a guide for your taping knife and a protective mask for mudding, resulting in smooth finished edges and far less cleanup.

### Installation Guide



#### Before Installation:

Measure, cut and dry fit the bead.

#### Step 1:

Coat the bead with Trim-Tex 847 Spray Adhesive.

#### Step 2:

Press the bead in place, applying pressure to the mud legs.

#### Step 3:

Staple every 6"-8" using 1/2" staples.

#### Step 4:

Finish with drywall compound. Remove tear-off strips prior to sanding.

#### Step 1:



#### Step 2:



#### Step 3:



#### Step 4:

