

Geometrix




Page 1 of 2

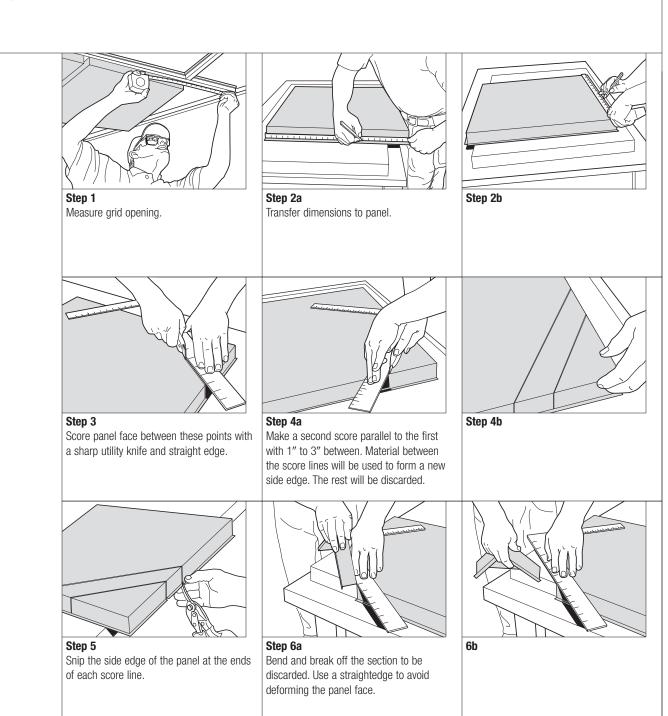

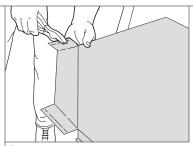

Step 7

Use pliers to flatten the side edges of the remaining scored section.

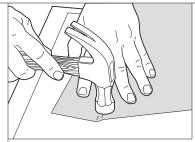


Step 8

Use a hammer to finish flattening these side edges. Be careful not to mar the panel face.




Step 9a

Use a straightedge to bend up this flattened section at the score line. You may need to finish this step by hand to completely form the new side edge.

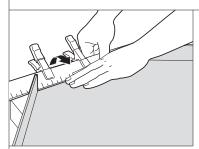


Step 9b

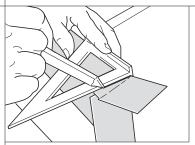

Step 10

Mark where the new side edge extends beyond the panel perimeter.

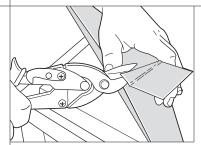


Step 11

Trim away and discard this excess material.



Step 12a

Install field-cut panel.

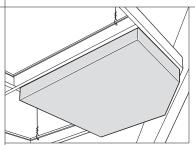

Step 12b

Note:

Be especially careful when field-cutting panels that do not butt to a wall.



All products described here may not be available in all geographic markets and are subject to change without notice. Consult your local sales office or representative for information.

Trademarks

The following are trademarks of USG Interiors, Inc. or a related company: Geometrix, USG.

Notice

We shall not be liable for incidental or consequential damages, directly or indirectly sustained, nor for any loss caused by application of these goods not in accordance with

current printed instruction or for other than intended use. Our liability is expressly limited to replacement of defective goods. Any claim shall be deemed waived unless made in writing to us within thirty (30) days from date it was or reasonably should have been

SAFETY FIRST!

Follow good safety and industrial hygiene practices during handling and installation of all products and systems. Take necessary precautions and wear appropriate personal protective equipment as needed. Read material safety data sheets and related literature on products before specification and/or installation.

