ALTERNATE INSTALLATION

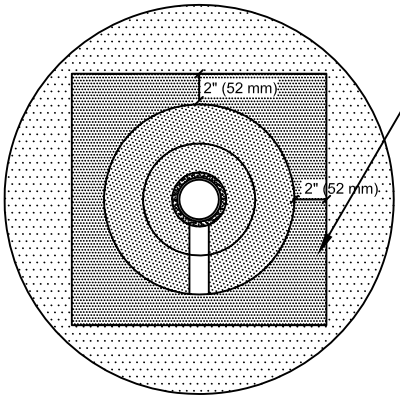

SEE NOTE #2

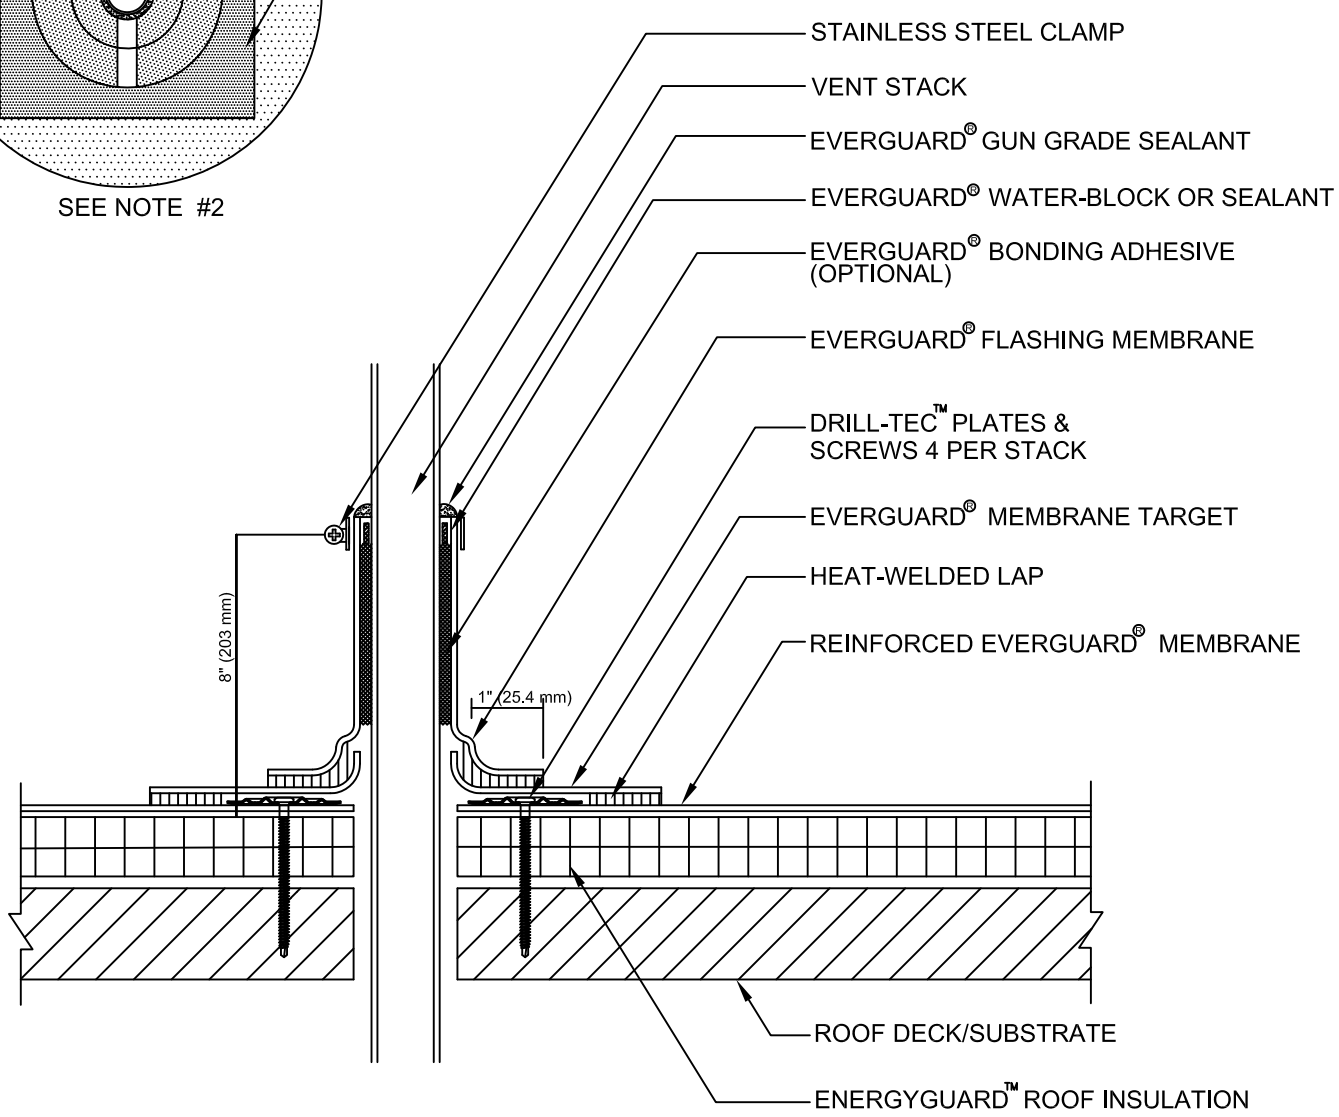

NOTE:

1. IF THE PLATES AND FASTENERS INTRUDE INTO BOOT FLANGE AREA, THEN A TARGET MUST FIRST BE INSTALLED OVER PLATES AND FASTENERS BEFORE INSTALLATION.
2. APPLY HEAT TO UNREINFORCED FLASHING AND FORM BY HAND PRIOR TO HOT AIR WELDING.
3. FOR SELF-ADHERED RAPIDSEAM™ TECHNOLOGY SYSTEMS, UP TO 10-YR. MAXIMUM GUARANTEE ONLY.
4. FOR SELF-ADHERED HEAT-WELDED SYSTEMS, UP TO 15-YR. MAXIMUM GUARANTEE ONLY.
5. APPLY EVERGUARD® TPO CUT EDGE SEALANT TO ALL CUT REINFORCED TPO EDGES (REFER TO EVERGUARD® DETAIL 115).

GAF®
www.gaf.com
1 Campus Drive.
Parsippany, NJ 07054

EverGuard SINGLE-PLY ROOFING SYSTEMS
ROOF PENETRATION SERIES

DRAWING # 507

SCALE N.T.S.

FIELD-WRAPPED PENETRATION FLASHING DETAIL

THIS DETAIL APPLIES TO:
Adhered Systems
Ballasted Systems
Mechanically Attached Systems
Self - Adhered Systems
TriPosite Systems

REVISION DATE 5-1-15