

# CASCADE™

*Signature Cut Shingles*

## Directions For Application

### 1 General Instructions

NOTICE: THESE SHINGLES MUST BE APPLIED TO CONFORM WITH ALL APPLICABLE BUILDING CODES. THESE DIRECTIONS REPRESENT COMMON AND ACCEPTED ROOFING PRACTICES. DEVIATIONS FROM THESE DIRECTIONS MAY ADVERSELY AFFECT THE ASSEMBLED ROOF SYSTEM PERFORMANCE, ROOF APPEARANCE, COMPLIANCE TO PRODUCT STANDARDS, COMPLIANCE TO CODES, AND STATED COVERAGE. See the PABCO® Limited Shingle Warranty for details, limits and conditions. Ask your supplier for a copy or visit our web site at [www.pabcoroofing.com](http://www.pabcoroofing.com).

Apply shingles exposing the bottom 4 1/2" to the weather.

The step-by-step application instructions below apply to standard slope/inclines between 4" per foot and 20" per foot. For low slopes (between 2" and 4" per foot) and on steep slopes (more than 20" per foot), modify the installation as described in Section #8. Do not apply these shingles on roofs having a slope less than 2" per foot.

IMPORTANT: FROM COURSE TO COURSE UP THE DECK, END JOINTS MUST BE MAINTAINED WITH A HORIZONTAL OFFSET OF 5". THE INSTALLER MUST ASSURE THAT ALL END JOINTS ARE COVERED. UNCOVERED END JOINTS MAY RESULT IN LEAKS WHICH ARE NOT COVERED BY THE PABCO® LIMITED SHINGLE WARRANTY. THE DIAGONAL APPLICATION DESCRIBED HERE IS NECESSARY TO GENERATE THE CORRECT PATTERN APPEARANCE. SEE SECTION #7 FOR ADDITIONAL INFORMATION AND INSTRUCTION. PABCO® IS NOT RESPONSIBLE FOR THE APPEARANCE WHERE THIS DIAGONAL METHOD OF APPLICATION IS NOT USED.

Ventilation: To prevent harmful condensation, air must circulate freely under the roof deck. FHA Minimum Property Standard indicates: A minimum of 1 ft<sup>2</sup> of total net free ventilating area is required for each 150 ft<sup>2</sup> of ceiling area, or 1 ft<sup>2</sup> for each 300 ft<sup>2</sup> of ceiling area if (A) a vapor barrier is installed on the warm side of the ceiling or (B) approximately 1/2 of the ventilation is provided near the ridge.

### 2 Roof Deck Requirements: New Construction

The minimum deck thickness must be either 3/8" plywood or 7/16" OSB type sheathing, conforming to the specifications of the APA - The Engineered Wood Association and the building code, or well-seasoned wood boards 1" minimum nominal thickness, 6" maximum width.

THESE SHINGLES SHOULD NEVER BE APPLIED TO ANY OTHER DECK without first obtaining written approval from PABCO® Roofing Products. Requests for approval must be accompanied by the deck manufacturer's recommended application procedure for asphalt shingles. APPLICATION DIRECTLY OVER POLYURETHANE OR POLYSTYRENE SURFACES WILL NOT BE APPROVED.



# CASCADE™


*Signature Cut Shingles*

## Directions For Application

### 3 Underlayment


On decks with a pitch of 4" per foot or greater, for new construction or when old roofing has been removed, apply a single layer of underlayment felt complying with ASTM D226, D4869, or D6757 and the building code, extended beyond the metal drip edge at the eaves 1/4" to 3/8". Overlap underlayment layers with a 2" top lap, 4" end laps, and a minimum of 6" over both sides over all hips, ridges, and valleys.

Drip edges are made of corrosion resistant materials that extend 2" minimum back from the roof edges and bend downward over them. Apply drip edge directly to the deck along the eaves and over the underlayment along the rakes.

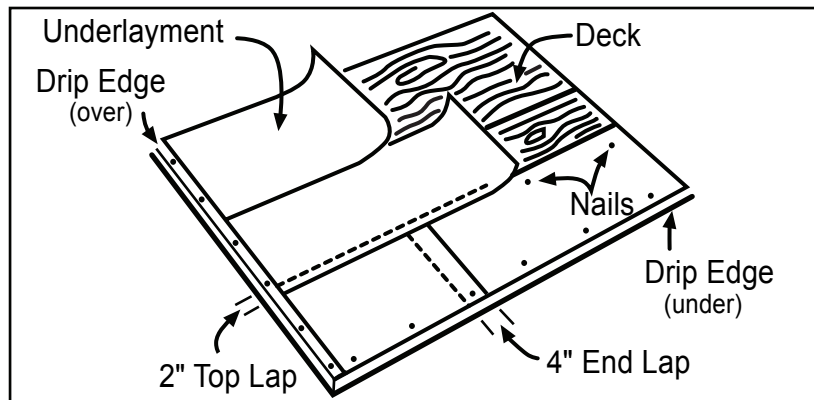

### 4 Eave Flashing

If winter temperatures average 30 °F or less, and ice may form along eaves to cause a back-up of water, install an eave flashing for ice dam protection. Install a self adhering, peel and stick type underlayment sheet complying with ASTM D1970 parallel to the eaves, applied per the manufacturer's instructions. This sheet overhangs the drip edge 1/4" to 3/8". This sheet extends up the roof to at least 24" inside the interior wall line. Horizontal laps (when needed), are located outside the wall line.

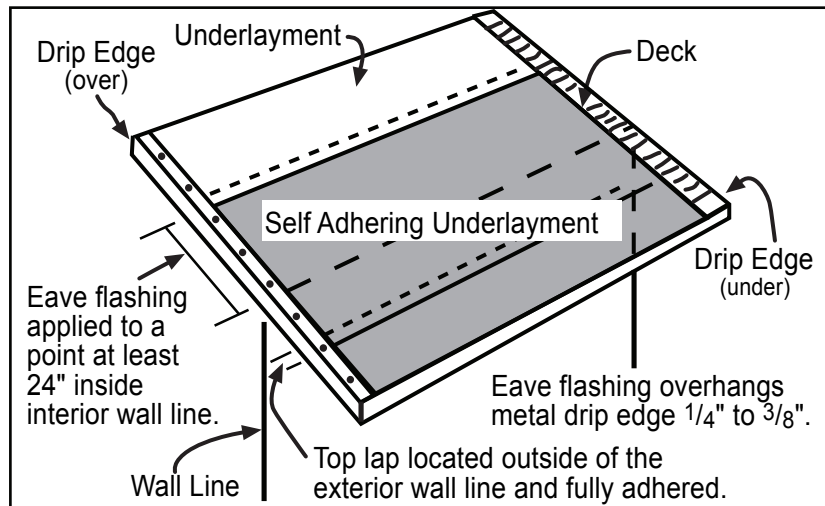



# CASCADE™

*Signature Cut Shingles*

## Directions For Application

### 5 Nailing Instructions

PABCO® recommends the use of nails. Use five nails per shingle for normal application, positioned in the nail zone" as shown below. The nail zone is a band of light colored granules running across the face of the shingles 9 1/2" to 11" up from the leading edge of the teeth. Nails shall be at least 1" long, aluminum or galvanized, 3/8" head, 11 or 12 gauge roofing nails. Drive nails flush with shingle surface. NAILS MUST NOT BE OVER DRIVEN. See our Cascade™ Application Details - Nailing Instructions for additional details.

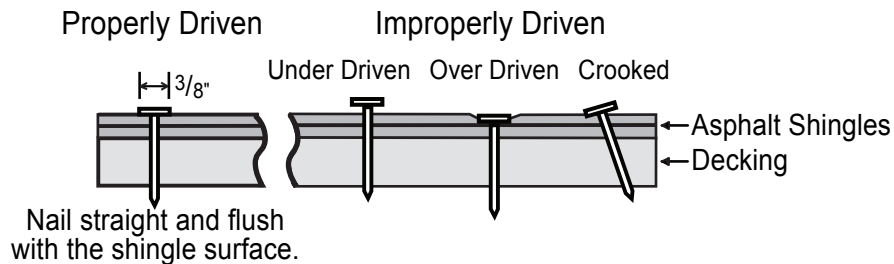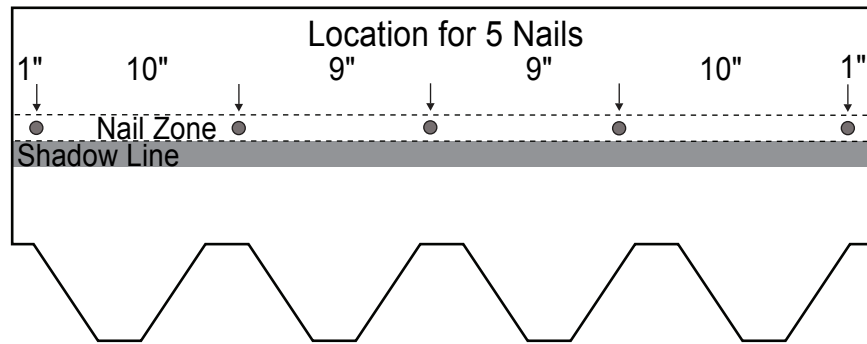




# CASCADE™

Signature Cut Shingles

## Directions For Application

### 6 Valleys

Valley application must comply with the building code. Where allowed, PABCO® recommends using open metal valleys (closed cut valleys are also accepted). This valley starts with a 36" underlayment centered down the valley. PABCO® recommends self adhering underlayment (ASTM D1970) for this bottom layer. The underlayment felt covering the decks is trimmed to overlap this at least 6". Apply a second layer of underlayment felt over this, centered down the valley. The metal valley flashing must be at least 26 gauge galvanized metal or an equally corrosion resistant metal, at least 24" wide. It is formed with a "W" shape and center rib. Apply the metal valley without puncturing it. Center the metal in the valley over the second layer of underlayment, extending beyond the eave drip edge  $\frac{1}{4}$ " to  $\frac{3}{8}$ ". If more than one piece of flashing metal is needed, the lower piece is nailed at the top. The upper piece laps over the lower piece nails by at least 8" and the lap is cemented together with asphalt roof cement complying with ASTM D4586. Snap 2 chalk lines down the valley, starting 2" on either side of the valley center line at the top of the valley and diverging  $\frac{1}{8}$ " from each other per foot down the valley. Apply the shingles into the valley in the normal sequence of application for the rest of the roof. Trim the shingles to the chalk line, but never use a piece less than 12" wide. If necessary, trim the preceding shingle on the course. Apply the shingles into the valley so that no nails pass through the valley metal. Clip the upper shingle corner (in the valley) 1" at 45°. Embed each shingle in a 3" wide strip of asphalt roof cement. See our Cascade™ Application Details - Valley Application for additional details.

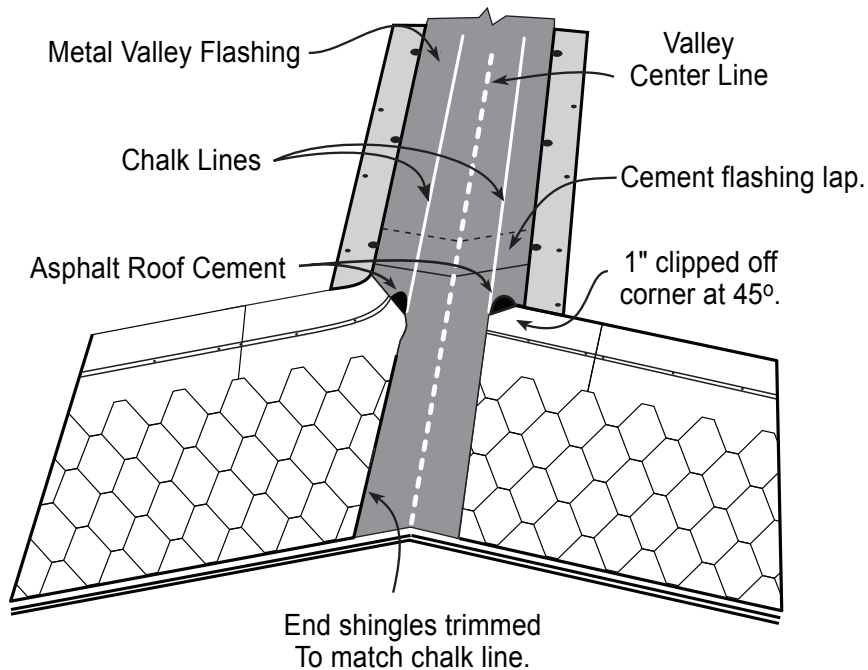

# CASCADE™

*Signature Cut Shingles*

## Directions For Application

### 7 Application, 5" Diagonal Offset Pattern

THE 5" HORIZONTAL OFFSET TO ALIGN BOTTOM TOOTH ENDS WITH THE SPACE BETWEEN TEETH IN THE COURSE BELOW IS CRITICAL TO THE FINAL APPEARANCE OF THE ROOF. NO OTHER OFFSETS ARE APPROVED. THE VERTICAL EXPOSURE MUST BE 4 1/2". USING CHALK LINES FOR OFFSET CONTROL IS STRONGLY RECOMMENDED. IN THE CIRCUMSTANCE WHERE A ROOF PLANE IS INTERRUPTED, SUCH AS WITH A DORMER, THE CHALK LINES ON EACH SIDE SHOULD BE EXTENDED ABOVE THE INTERRUPTION, AND THE CORRECT SPACING CONFIRMED, SO THAT THE SHINGLES ON ONE SIDE WILL BE CORRECTLY SPACED RELATIVE TO THE SHINGLES COMING UP THE OTHER SIDE OF THE INTERRUPTION.

**FIRST STARTER COURSE:** Use PABCO® Universal Starter with the adhesive at the eaves (or a self sealing three tab shingle with the tabs cut off). Cut 7" off the length of the first starter course shingle and apply at the lower left hand corner of the roof. The starter course overhangs the rake edge and the drip edge 1/4" to 3/8". Continue the starter course with full shingles.

**SECOND STARTER COURSE:** Use Paramount® Starter that matches the Cascade™ shingle color. Cut 5" off the length of the first Paramount® Starter shingle and apply at the lower left hand corner of the roof. This starter is applied flush with the first starter course at the rake and eaves. Continue the Paramount® Starter across the deck with full shingles.


**FIRST COURSE:** Start with a full Cascade™ shingle applied flush with the Paramount® Starter at the lower left hand corner of the roof.

**SECOND COURSE:** Cut 5" from the left end of a shingle and apply the 35" long piece over the headlap of the first course shingle, exposing the first course 4 1/2".

**THIRD COURSE:** Cut 10" from the left end of the shingle and apply the 30" long piece over the headlap of the second course shingle, exposing the second course 4 1/2".

**SUCCEEDING COURSES:** Courses four through eight are begun with a partial shingle, each 5" shorter, establishing the overall diagonal pattern. See illustration below. Pieces cut from shingles along the left rake can be used to finish off courses at the right rake. Now apply full shingles to courses one through eight. Repeat the diagonal pattern from the first eight courses by starting course nine as a full shingle and proceeding with the first shingle for each course 5" shorter each time.

See our Cascade™ Application Details - Getting Started for additional details.

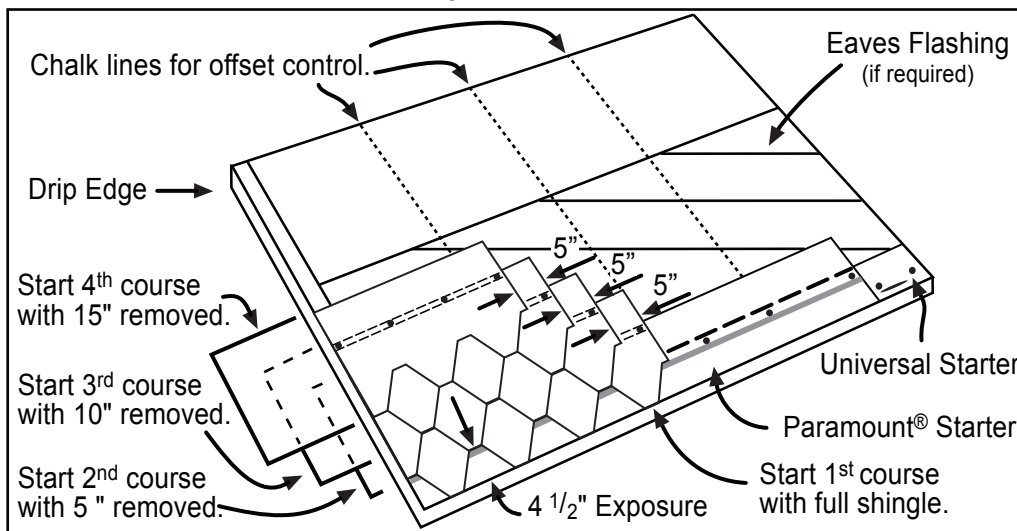



# CASCADE™


*Signature Cut Shingles*

## Directions For Application


### 8 Special Applications

For areas where local knowledge indicates exposure to high winds may occur, shingles must be applied with 6 nails (spaced as shown below) and sealed to qualify for wind damage warranty coverage.

**Steep Slope Application:** On slopes greater than 20" per foot (Mansard type roofs), 6 nails are required, spaced as shown below. These shingles must be hand sealed at the time of application with asphalt roof cement, by applying 4 spots about the size of a quarter, each centered under a tooth, 1" up from the bottom edge of that covering tooth.

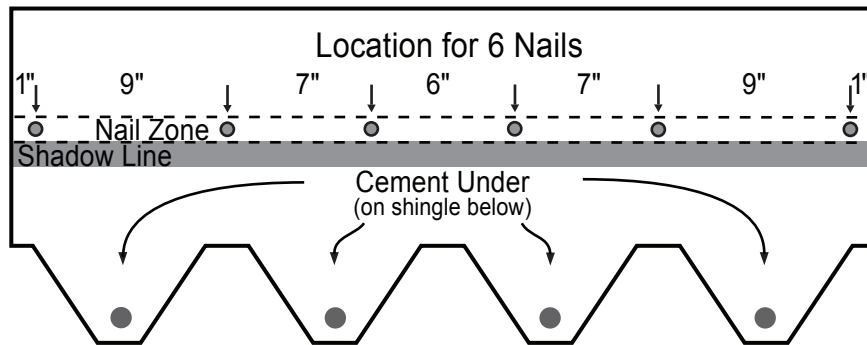

**Low Slope Application:** On slopes between 2" and 4" per foot, where allowed by code, apply one layer of a self adhering ASTM D1970 sheet per the manufacturer's instructions. As an alternative, provide a double layer of underlayment felt (ASTM D226, D4869, or D6757) by applying a 19" wide underlayment strip across the eaves. Over this, apply a full 36" wide sheet. Continue 36" wide sheets, lapping each 19" over the preceding course.

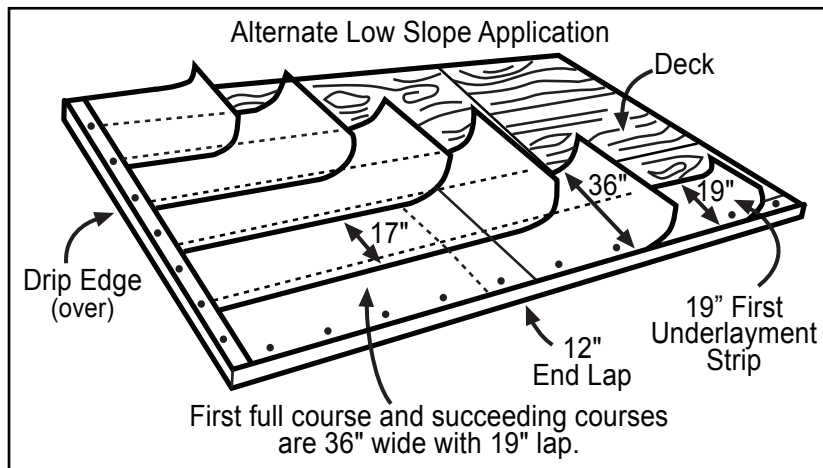




# CASCADE™

Signature Cut Shingles

## Directions For Application


### 9 Base Flashing

The base flashing for the front of the chimney is installed as illustrated over the headlap of the last course of shingles below the chimney, and extending up the chimney. Set the roof and chimney overlaps in asphalt roof cement. Where shingle ends are against a vertical surface (sidewall or chimney), the shingles must be flashed with metal step flashing shingles applied over the end of each shingle. The flashing shingles are at least 8" by 6 1/2", bent to extend 4" out over the shingles on the roof deck and 4" up the vertical surface. Each flashing shingle is placed so that its leading (bottom) edge is just back from the exposed edge of the shingle which will overlap it. It is secured to the deck with one nail near the top corner. See ARMA *Residential Asphalt Roofing Manual* for additional details.

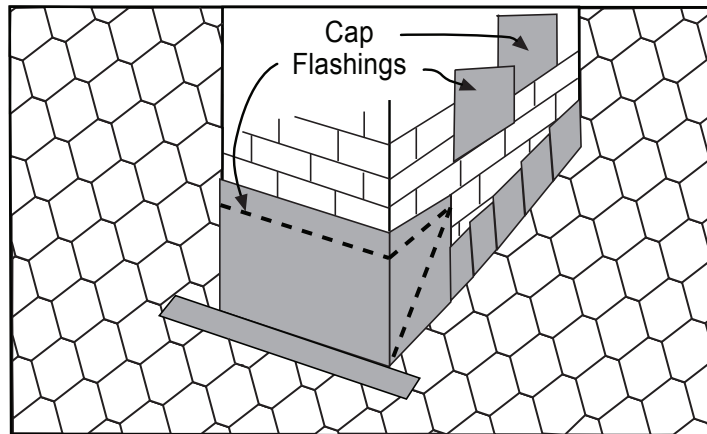

### 10 Cap (Counter) Flashing

The base flashing of chimneys, skylights, vents, and adjoining walls must be covered by a metal cap flashing. The cap flashing extends at least 1" into the masonry mortar joints and is caulked with asphalt roof cement to insure a water-tight connection. The base flashing is cut to cover the cricket and extend 6" up the brickwork on the chimney.

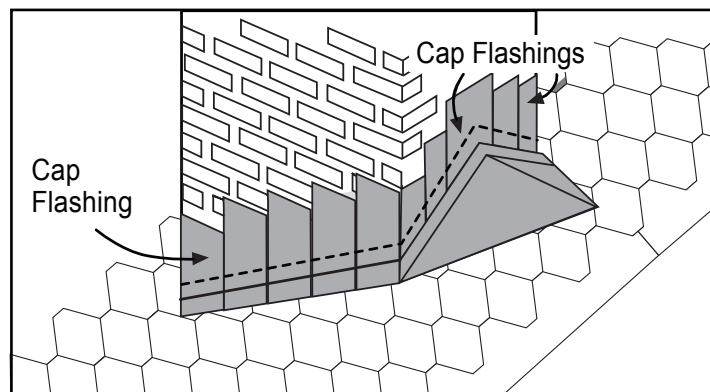


# CASCADE™

*Signature Cut Shingles*

## Directions For Application

### 11 Hips and Ridges

Trim shingles even with the ridge and cover with PABCO® Shadow Cap shingles exposed  $5\frac{5}{8}$ " to the weather. Nail  $6\frac{5}{8}$ " back from the exposed edge and 1" up from the bottom edge with galvanized roofing nails long enough to penetrate into the deck at least  $\frac{3}{4}$ ". Applying PABCO® Shadow Cap double thick is recommended to accent the hip & ridge lines. **IMPORTANT:** In cold weather (40 °F or below) store shingles for hip & ridge in heated location 24 hours prior to application to assist in bending the shingles without damaging or cracking them.

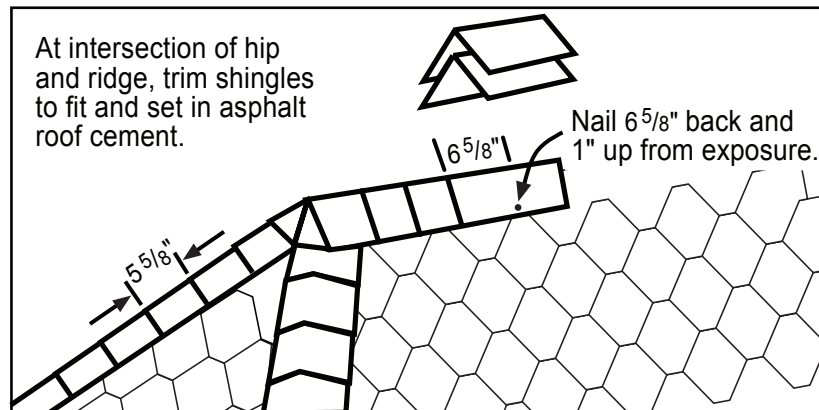

### 12 Reroofing

PABCO® recommends but does not require old roofing be removed before installation of Cascade™. This provides a smoother application surface and allows for more effective inspection and repair of the existing deck. If the old roofing has been removed, and the deck has been inspected and repaired, proceed with the application as with a new roof.

### The PABCO® Limited Shingle Warranty

PABCO® warrants that our shingles are free from manufacturing defects that adversely affect their performance. PABCO® is not responsible for failures of any roof system that are not directly attributable to a PABCO® product. See the PABCO® Limited Shingle Warranty for details, limits, and conditions.

1718 Thorne Road  
Tacoma, Washington 98421-3207

www.pabcoroofing.com  
Phone (253) 272-0374