

LO HI
HUMIDITY

LO HI
HUMIDITY

MemBrain™

Continuous Air Barrier & Smart Vapor Retarder



MemBrain™ Air Barrier Installation Instructions for Wood Framing

MemBrain™ Air Barrier Installation Instructions for Wood Framing

Introduction

In addition to performing as an interior vapor retarder, MemBrain™ may be installed as a continuous, interior air barrier system over unfaced fiberglass or other insulation requiring a separate vapor/air barrier. MemBrain is recommended for interior vapor retarder

and air barrier applications, located at the “warm in winter” (moderate to high heating climates) side of the building envelope. **MemBrain™ sheeting is not intended for exterior applications where it would be exposed to the elements or UV light.**

Safety note: When installing MemBrain, make sure that you are wearing the appropriate personal protective equipment. The following items are recommended: safety goggles or glasses and gloves.

Required Materials

The following materials should be used to create the MemBrain Continuous Air Barrier and Smart Vapor Retarder System:

- MemBrain Continuous Air Barrier and Smart Vapor Retarder
 - Sheeting available in 8' 4", 9' 4", 10' 4" and 12' 4" widths, 100' lengths (2.44, 2.74, 3.05 and 3.66 mm widths, 30.48 m length)
- Approved Sealant/Caulk
 - Silicone-based sealants
 - Must conform to ASTM C920 or C834 specifications
- Approved Sheathing Tape

System Overview and Summary

MemBrain sheeting may be installed as an interior air barrier system. Install large sheets using recommended fasteners, tapes and sealants to achieve air barrier continuity with the building envelope components, as illustrated in **Figure 1**.

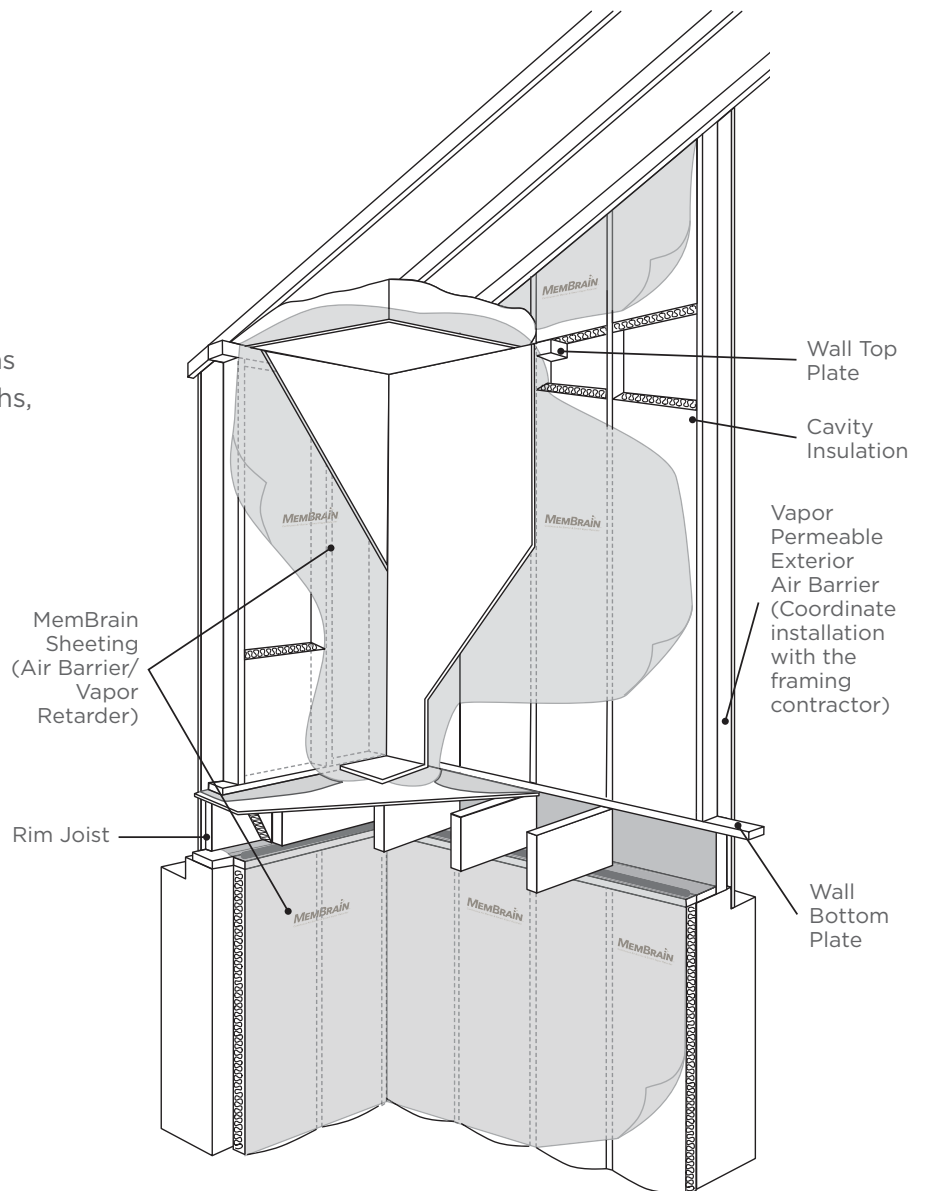


Figure 1: Maintain air barrier continuity at rim joists, corners, partition wall interfaces and ceilings.

Setup and Site Preparation

The most effective time to install the MemBrain Air Barrier System is:

- After all building envelope penetrations are complete (i.e., plumbing lines, electrical outlets, exhaust vents, lighting fixtures, etc.) and vertical penetrations through wall plates in cavities are appropriately sealed.
- After all windows and doors are installed, and rough opening gaps are sealed appropriately (i.e., with code-approved low expansion foam).
- After wall systems are insulated with unfaced fiber glass insulation.
- Before exterior walls and ceilings are finished with gypsum board.

Roof/Attic/Ceiling Applications

1. Staple MemBrain to the bottom of ceiling joists every 12 to 24 inches.
2. Seal the film to interior and exterior wall top plates using recommended sealants.
3. Fasten the film using staples through the sealant to the plates every 12 to 24 inches.
4. Allow the film to overlap at the corners a minimum of 6 inches.

Exterior Wall Applications

1. Start at a corner of the room where an interior partition wall or door jamb meets an insulated exterior wall. Lay the MemBrain roll on the floor, with the end touching the bottom of the partition wall or jamb.
2. Unroll MemBrain along the insulated wall, until the next corner is reached. Cut the film perpendicular to the insulated wall so that the overall length is about 8 to 12 inches longer than the wall.
3. With the 3-inch offset edge parallel with the top of the insulated wall, place one corner of the cut sheet at the top left or right corner of the wall. The factory-cut edge should be covering the top edge of the top sill plate. The cut edge of the sheet should wrap around the inside corner at least 4 inches. Ensure that the folded material is facing the room (the print across top header will be facing out). Anchor this corner with staples.
4. Apply recommended sealant over ceiling-overlapped film material at the top plate, to the frame around window and door rough openings and to the bottom plate (See MemBrain Air Barrier System Details on page 4 and Figure 17 on page 10). Working toward the opposite corner, pull the sheet tight, and staple the offset edge to the top sill plate through the sealant bead. Staples should be at least 12 to 24 inches apart.
5. After stapling to the opposite corner, allow the folded sheet to unfold to the floor. (**See Figure 2**)
6. Pull the sheet downward and staple through the sealant bead to the bottom sill plate. Then staple at 12- to 24-inch intervals along each stud. Effort should be made to minimize wrinkles along the stud surfaces to make drywall installation easier.
7. Follow the MemBrain Air Barrier System Details on page 4 to ensure an air-tight assembly.

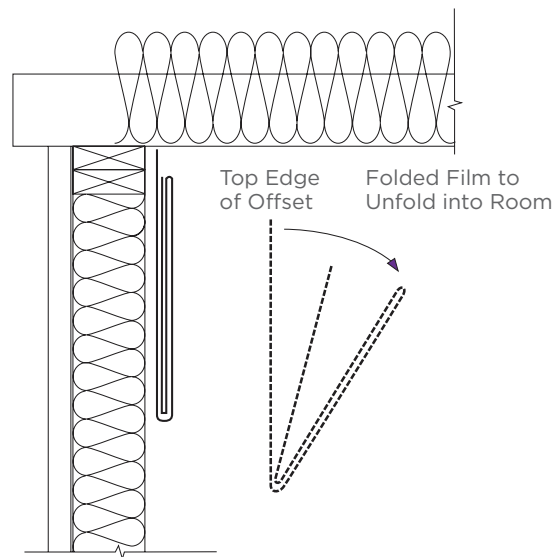


Figure 2: MemBrain sheeting orientation for wall installation method.

Acoustical and Silicone-based Sealant Application at Sheet Terminations

Figures 3 and 4

- Use a combination of staples and recommended sealants to attach MemBrain to the top plate, bottom plate and end studs.
- Place a 1/4-inch to 3/8-inch bead of sealant over the stud surface.
- Place the film over the sealant without tension and lightly press to ensure complete contact.
- Secure the MemBrain sheet through the adhesive bead with 1/2-inch staples every 12 to 24 inches.

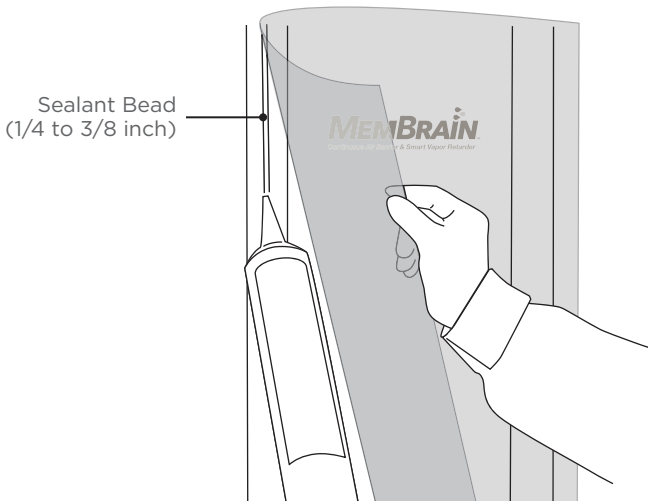


Figure 3: Sealant application

Lapped Joint Treatment

Figure 5

- Apply a recommended sealant to the wood stud surface.
- Overlap the MemBrain sheet a minimum of 6 inches.
- Staple through the sealant to the studs every 6 to 12 inches.
- Seal the overlapped joint using recommended sheathing tape.
- All vertical and horizontal seams should be treated as described above.

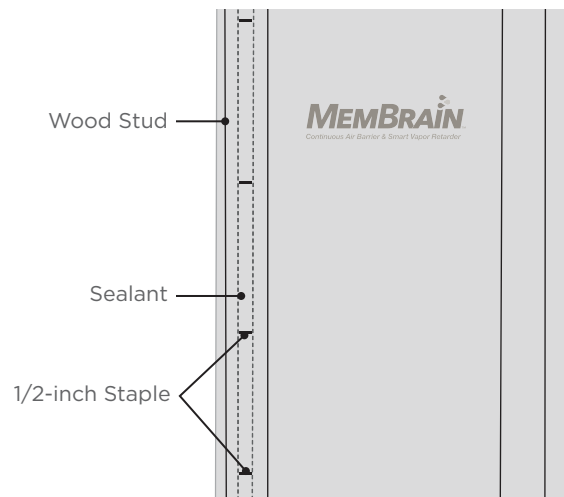


Figure 4: Fastener application

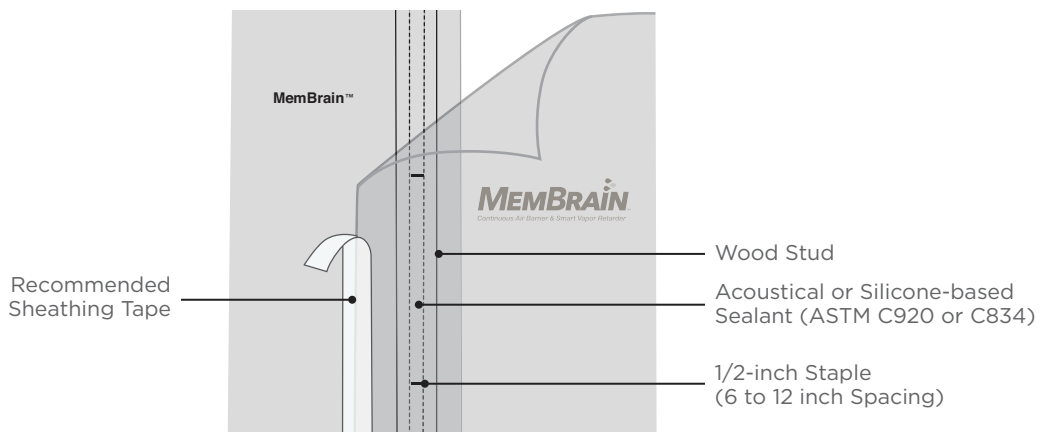


Figure 5: Overlapping seam treatment.

MemBrain™ Air Barrier System Details

Penetrations

Figures 6 through 11

- Building envelope penetrations include windows, doors, dryer vents, bathroom exhaust fans, electrical outlets, gas lines, plumbing, etc. (See Figure 6)
- Cut and fit the MemBrain sheeting tightly around the penetrations. (See Figure 7)
- Seal the film around all electrical, HVAC and plumbing penetrations with recommended sealants or sheathing tapes.

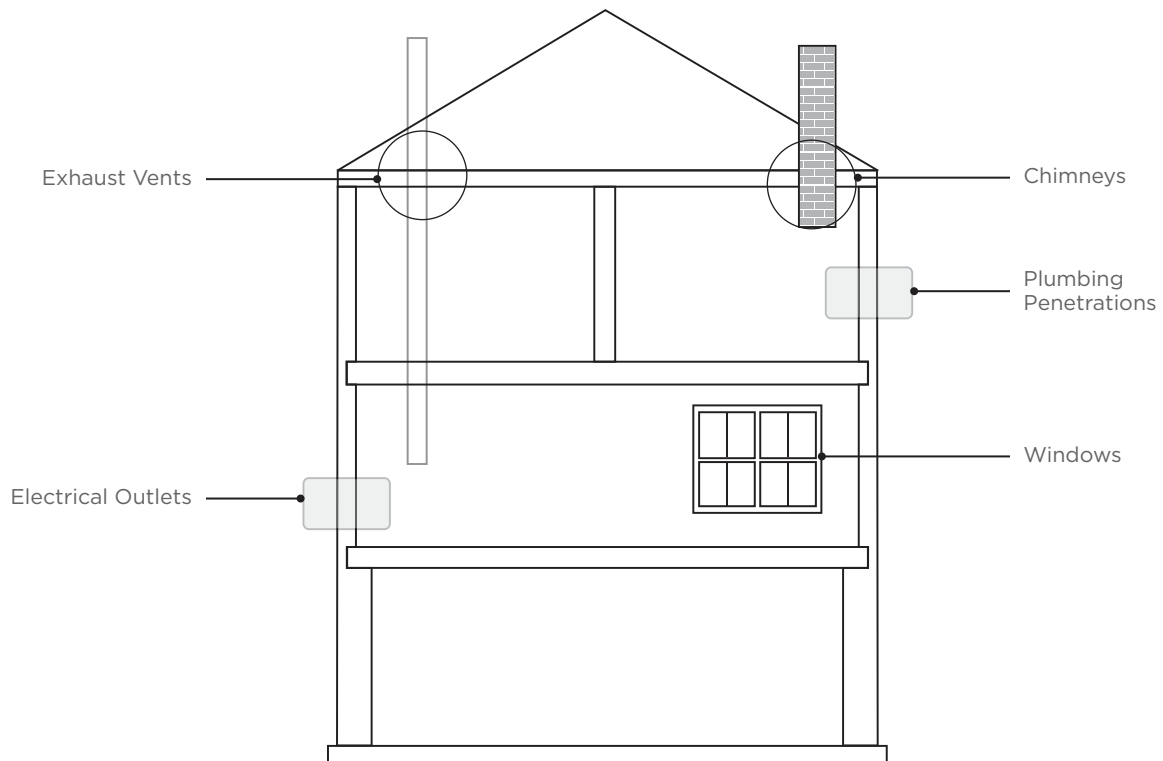


Figure 6: Building envelope penetrations

MemBrain™ Air Barrier System Details

Window and Door Treatment

Figures 7 through 10

- Cut the MemBrain sheet to fit the rough opening.
- Slit the film at the corners. (See Figure 7)
- Apply recommended sealant between the film and the window frame.
- Staple through the sealant to the window head, jambs and sill. Seal the window to the rough opening with recommended sealant. (See Figure 8)
- Apply recommended sealant between interior finishing material (typically gypsum board) and the attached MemBrain sheet. (See Figure 9)

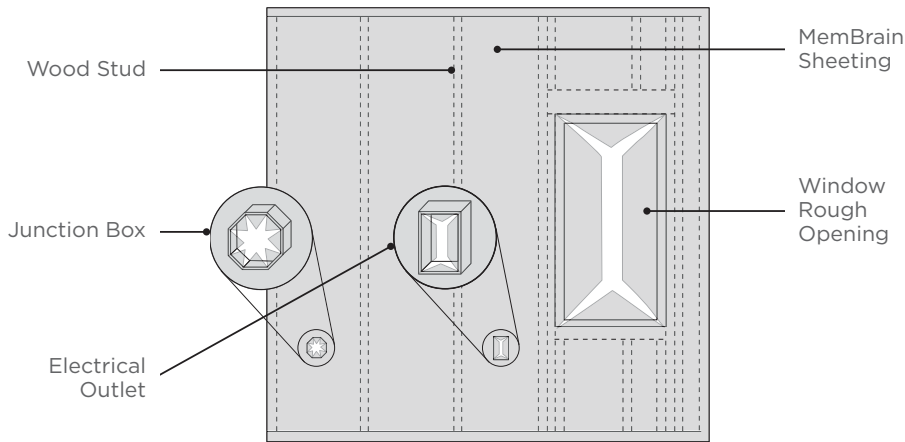


Figure 7: Cut MemBrain sheeting to tightly fit penetrations

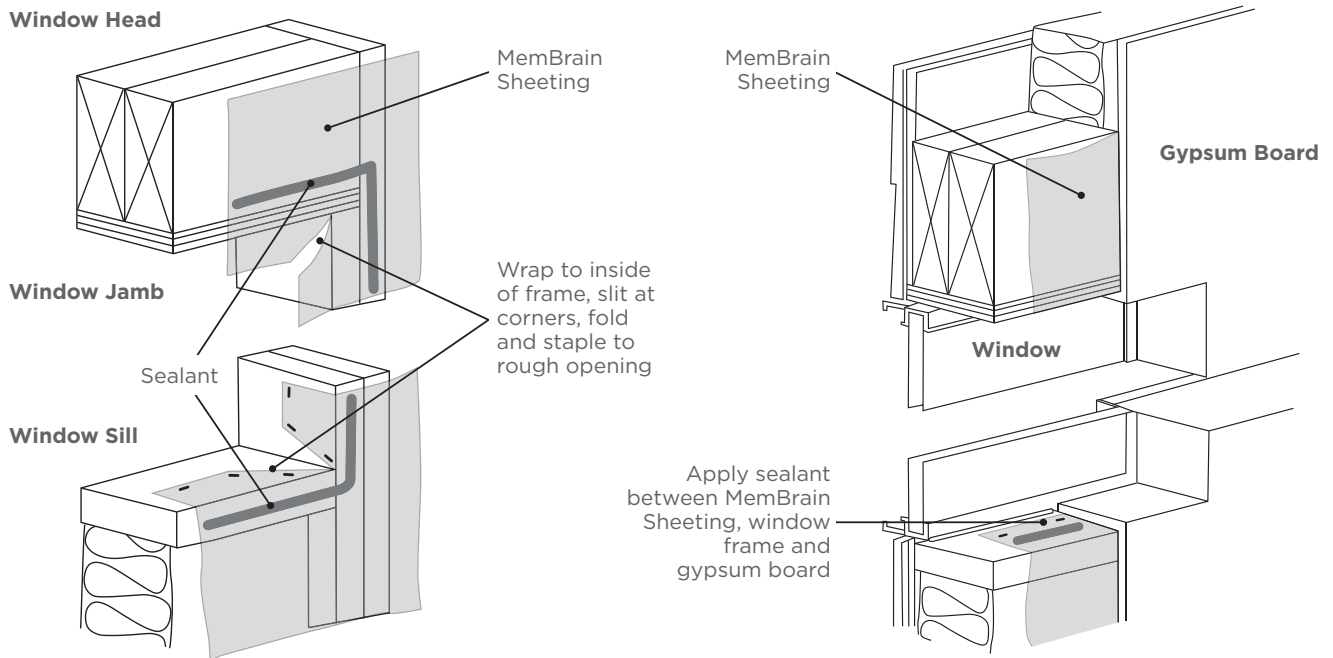


Figure 8: Window rough-opening treatment

Figure 9: Window finish treatment

Large Circular Penetrations

Figures 10 and 11

- Trace the penetration circumference on a separate piece of MemBrain sheeting.
- Cut a square piece of film with a minimum 6-inch clearance from the penetration outline.
- Intersect the circle with four diameter lines. (See Figure 10)
- Cut according to these lines toward the circle's perimeter.
- Place the square patch over the penetration. (See Figure 11)
- Seal the cut edges to the penetration with recommended sheathing tape.
- Seal the square patch to the continuous sheet surface without film tension using recommended sheathing tape and lightly press to ensure complete contact.

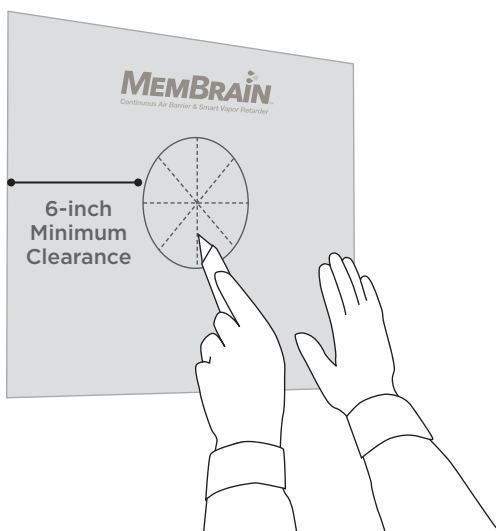


Figure 10: Patch preparation

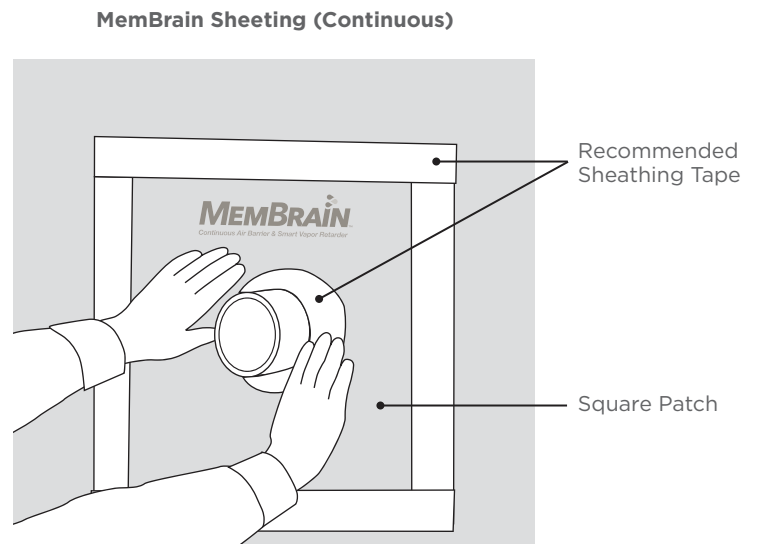


Figure 11: Patch attachment.

MemBrain Sheet Tears and Holes

- Cover all tears and holes with recommended sheathing tape.
- Treat large holes (greater than 1 inch) like large penetrations using a square patch.

Electrical Outlets

Figures 12 and 13

- Wrap and seal electrical boxes using recommended sheathing tapes and sealants.
- Airtight plastic boxes are recommended.

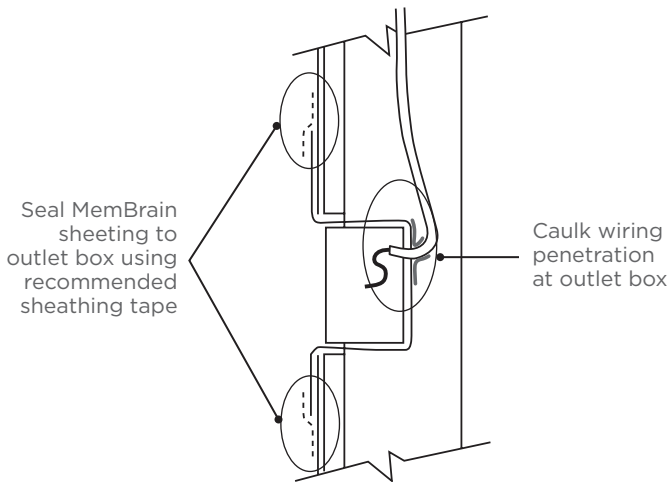


Figure 12: Sealed interior electrical outlet.

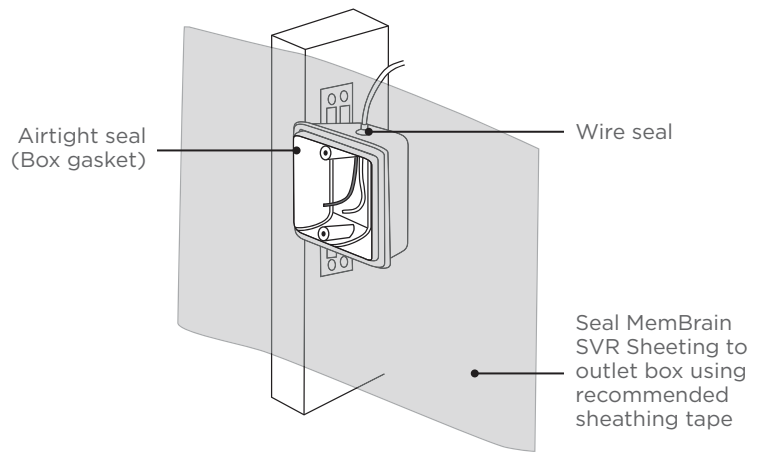


Figure 13: Airtight electrical outlet box

Plumbing Penetrations

Figure 14

- Secure plumbing lines to a rigid mounting panel.
- Seal penetrations using recommended sealants.
- Attach MemBrain sheathing to mounting panel using recommended sealants.

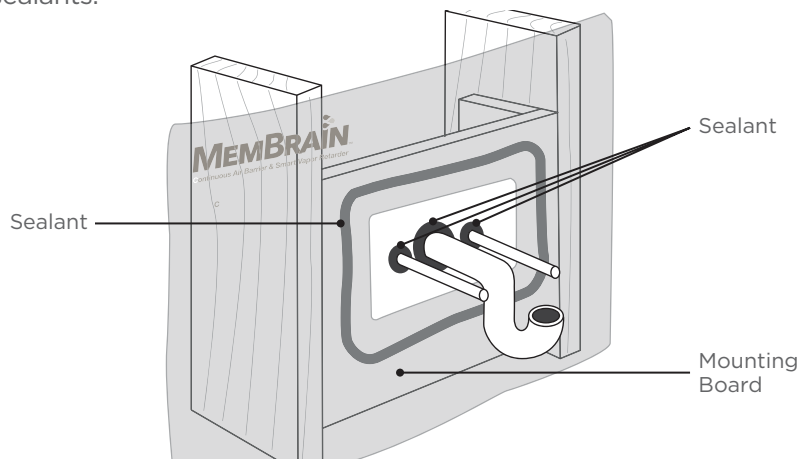


Figure 14: Mounted and sealed plumbing penetrations

Air Barrier System Continuity

Figure 15

- Maintain air barrier system continuity at wall, ceiling, floor and foundation intersections. Use recommended sealants. Seal between framing and film overlaps.
- Coordinate installation details with framing and insulation trade contractors.
- Insulate rim and band joists with fiber glass insulation batts wrapped or pillowed with MemBrain sheeting.

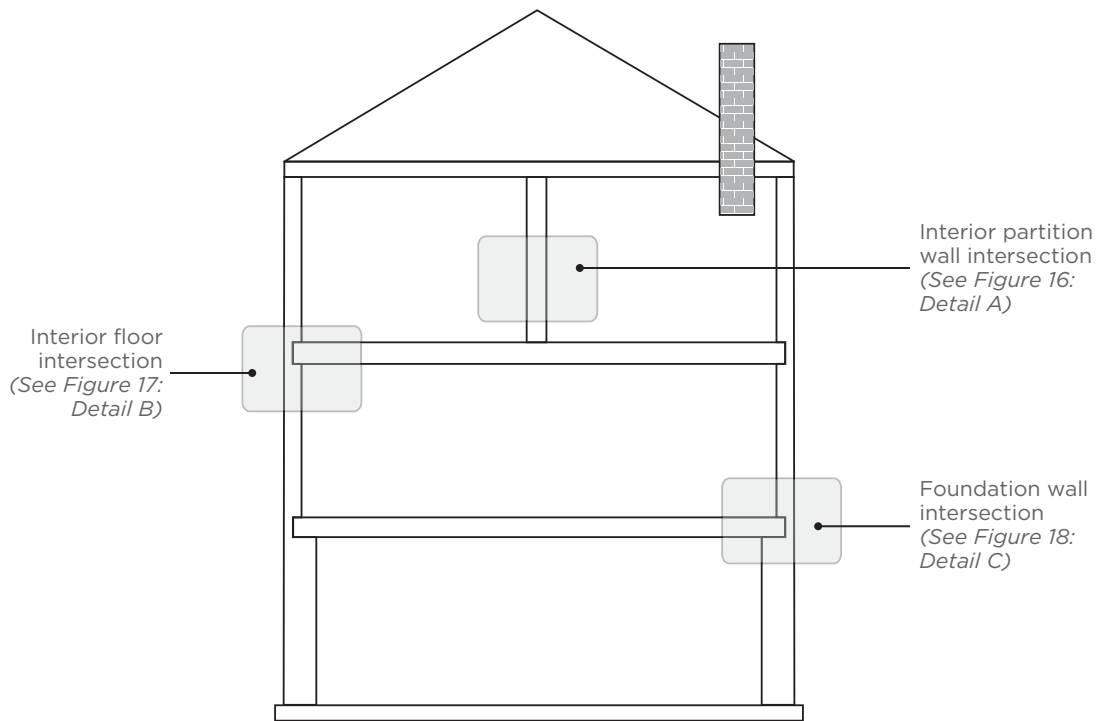


Figure 15: Building envelope intersection locations.

Air Barrier System Continuity *(continued)*

Figures 16 through 18

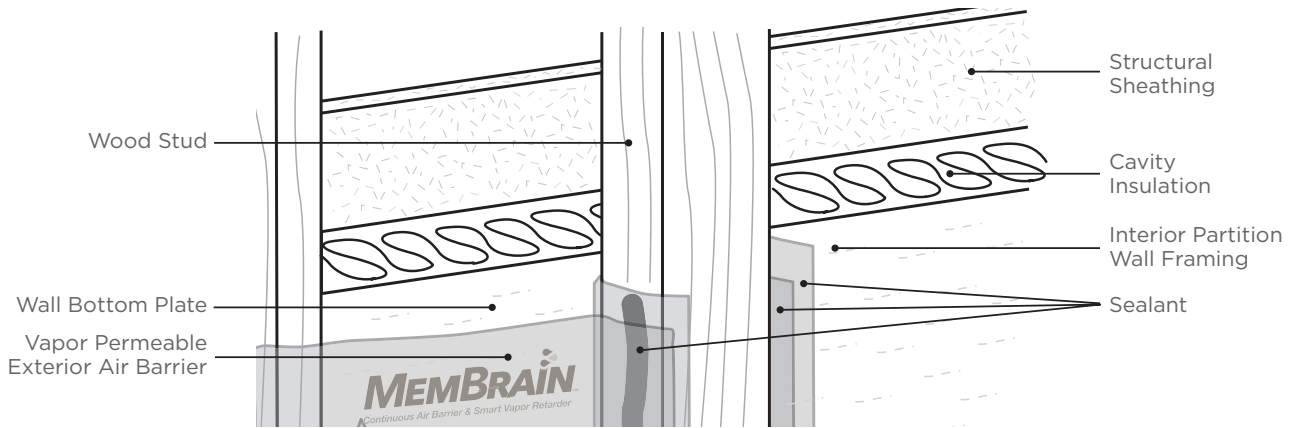


Figure 16: Detail A - MemBrain Air Barrier System interior partition intersection details

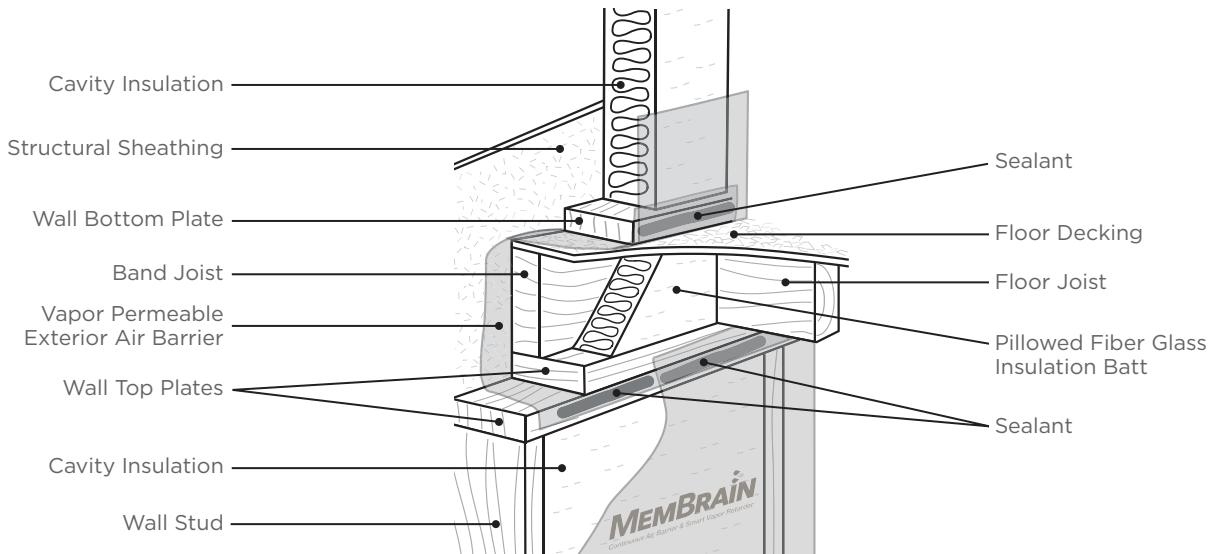


Figure 17: Detail B - MemBrain Air Barrier System interior floor intersection details.

Air Barrier System Continuity (continued)

Figure 18

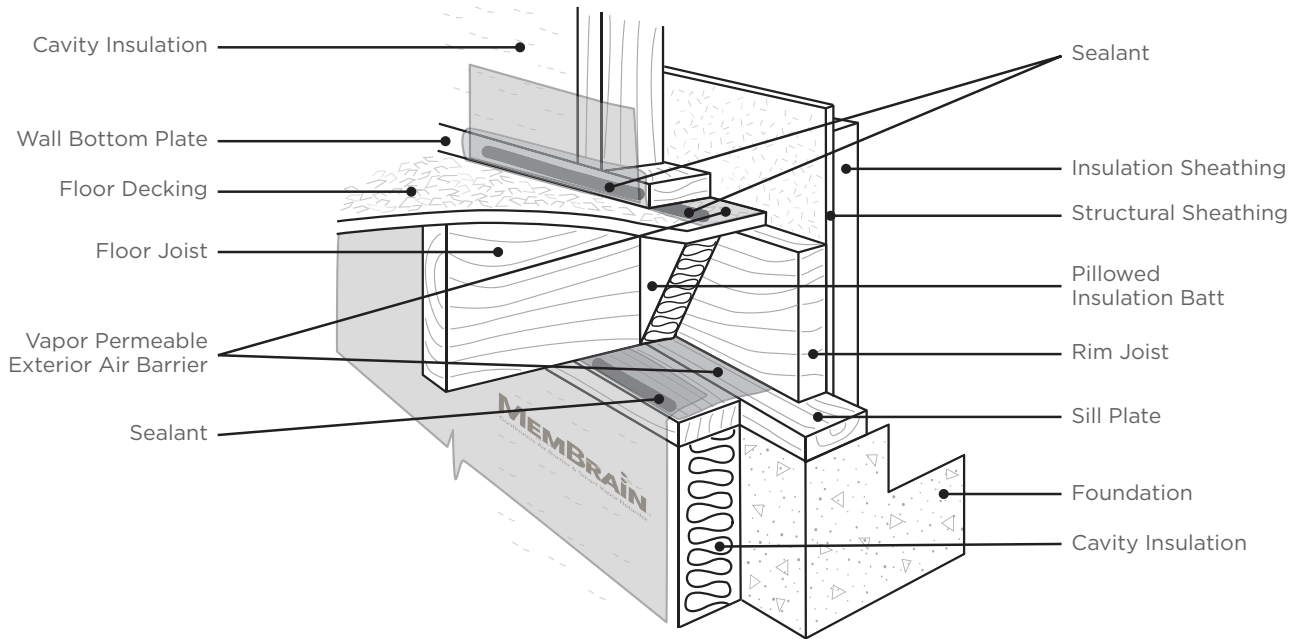


Figure 18: Detail C - MemBrain Air Barrier System foundation wall intersection details.

Recommended References

- Super Good Cents Builder's Field Guide to Energy Efficient Construction - Chapter 9, "Air Tightening Specialists," Bonneville Power Administration, Publication #DOE/BP-2651, 1992.
- Best Practice Guide, Building Technology - Wood-frame Envelopes, "Details: Wall Assembly A - Basic Stud Wall with Polyethylene Air Barrier and Vapour Retarder," Canadian Mortgage and Housing Corporation (CMHC), pg. 7-3 to 7-9, 2006.
- Air Barrier Association of America, <http://www.airbarrier.org>

Create a More Comfortable Home

certainteed

SAINT-GOBAIN



Fiberglass | Mold Prevention
Technical | Equipment

Learn more at certainteed.com/insulation



CertainTeed

CEILINGS • GYPSUM • INSULATION • ROOFING • SIDING • TRIM
20 Moores Road, Malvern, PA 19355 800-233-8990 certainteed.com

