

EMSEAL, LLC

111 Royal Group Crescent
Woodbridge, ON L4H 1X9 Canada
PH : 416-740-2090, FX : 416-740-0233



EMSEAL JOINT SYSTEMS, LTD

25 Bridle Lane
Westborough, MA 01581 USA
PH: 508-836-0280, FX: 508-836-0281

EMSEAL DFR-FP (DFR For Plaza Decks and Split Slabs)...Install Data
March 2021, Page 1 of 23

Installation Instructions

DFR-FP (DFR, For Plaza Decks and Split Slabs)

IMPORTANT!

Do not install this material until all members of your crew have read and understand these instructions.

**If any of the crew do not understand any part of these instructions call EMSEAL:
USA & Canada: 1-800-526-8365 or 508-836-0280**

This product can only fulfill its design function if it has been correctly selected and correctly installed. This means that joint width (after allowance for concrete shrinkage and post-tensioning shortening where applicable), total joint movement and expected loads must have been considered and accounted for.

These installation instructions are generic and may need adapting to suit specific project requirements and unique conditions. Consult EMSEAL if necessary.

The DFR-FP SYSTEM is a silicone bellows fire-rated joint system that is adhered to the faces of steel-and-aluminum retainer legs into which are locked side flashing sheets for watertight integration with buried split-slab or plaza-deck waterproofing membranes.

The installation of the DFR-FP occurs over five stages:


STAGE 1: Installation of the FP retainer legs onto the structural slab as well as the installation of the FP flashing sheets.

STAGE 2: Installation of the DFR-FP foam into the FP retainer legs.

STAGE 3: Sealing and closing of the FP capping system

STAGE 4: Integration of the side sheets into the deck waterproofing membrane system.

STAGE 5: Installation of the wear course (pavers, topping slab, etc.)

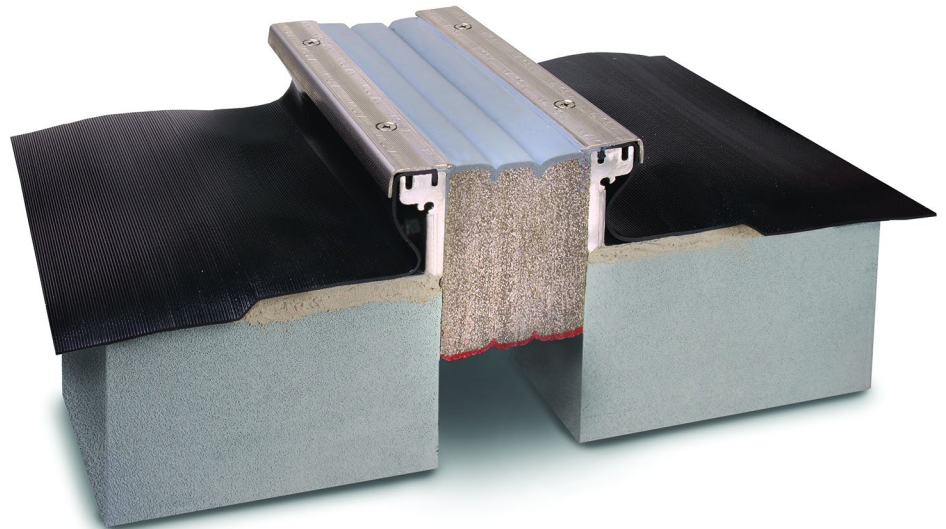

Please contact EMSEAL with any job-specific installation questions (1-800-526-8365 or 508-836-0280).

EMSEAL JOINT SYSTEMS, LTD. 25 Bridle Lane, Westborough, MA 01581

EMSEAL, LLC. 120 Carrier Drive, Toronto, Ontario, Canada M9W 5R1


EMSEAL_DFR-FP_ID_1A

PH: 508-836-0280 FX: 508-836-0281

or Toll Free: 800-526-8365

Copyright © 2021, by EMSEAL Joint Systems Ltd, All Rights Reserved

STANDARD SYSTEM COMPONENTS

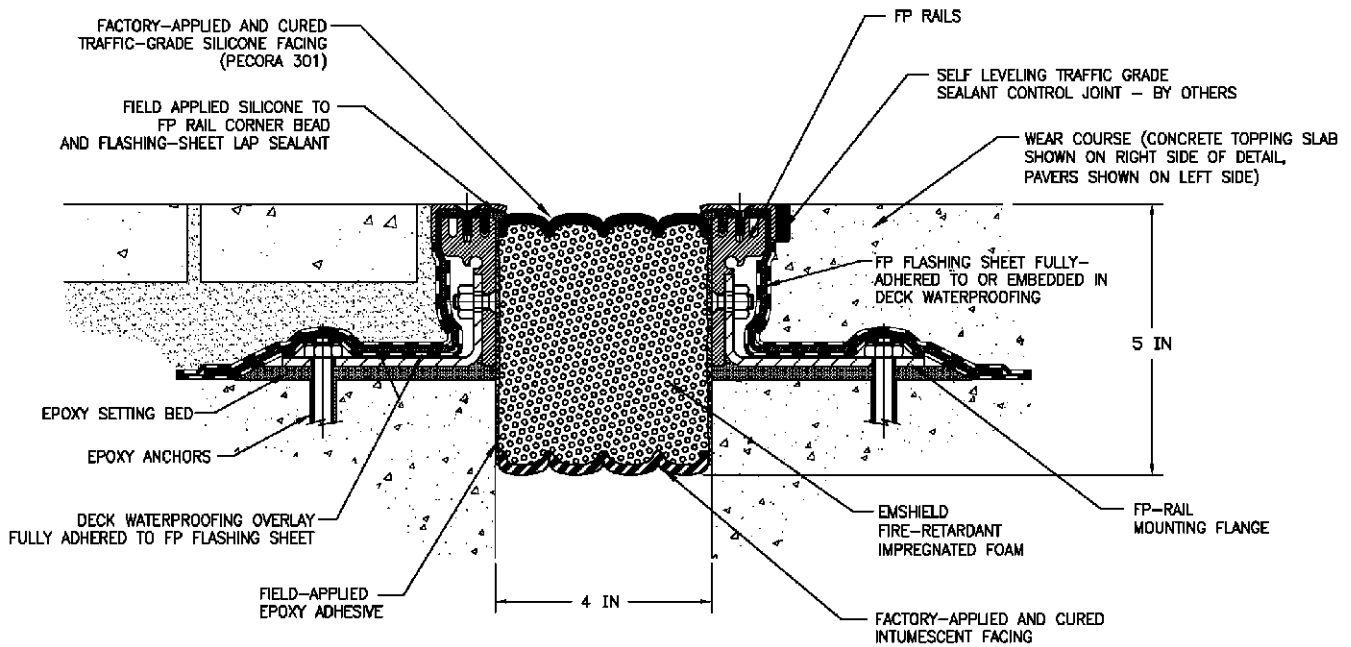

IMPORTANT! Cold or hot temperatures can affect the mixing performance of setting bed mixtures as well as adhesives and elastomeric concrete. This is especially important when temperatures approach freezing (32°F / 0°C) or extremely hot conditions. No unmixed components should be allowed to freeze or overheat and should be stored at temperatures between 40°F / 5°C and 75 °F / 24°C.

All mixing should occur at an ambient temperature of 40°F / 5°C or higher.

EQUIPMENT LIST:

In addition to a reliable power source, normal tools of the trade and safety equipment as required by the installing contractor's internal safety program and in compliance with industry standards and local, state and federal safety requirements, the following material and equipment must be on-site before the EMSEAL Technician arrives or before installation can begin:

<p>Crew A crew of 4 is typical when installing this system but could vary with the size and complexity of the job.</p> <p>For Welding Rubber: IMPORTANT: <i>If you are planning to, or will need to, field-weld any of the rubber components, be sure to order an on-loan weld-kit from EMSEAL.</i></p> <ul style="list-style-type: none"> <input type="checkbox"/> On-loan weld kit from EMSEAL <p>For Cutting, Drilling, Screwing, Fastening:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 4-inch angle grinder(s) <ul style="list-style-type: none"> <input type="checkbox"/> Diamond cup blade(s) for concrete <input type="checkbox"/> thin "cut-off" blade(s) for metal <input type="checkbox"/> "Sawz-All" <ul style="list-style-type: none"> <input type="checkbox"/> long and short metal cutting blades for sawz all <input type="checkbox"/> min. 2 ea - Hammer Drills with depth guides <ul style="list-style-type: none"> <input type="checkbox"/> min. 6 ea - Hammer drill bits, 3/8-inch diameter, suitable for masonry/concrete <input type="checkbox"/> compressed air blower with small gauge extension tube (for blowing out anchor holes) <input type="checkbox"/> standard commercial-grade high-speed cordless drills with adjustable torque settings <ul style="list-style-type: none"> <input type="checkbox"/> drill index with sizes 1/32-inch to 1/2-inch minimum <input type="checkbox"/> high-speed, 3/4-inch, metal countersink bits <input type="checkbox"/> 5mm (13/64") and 8mm (5/16") high speed drill bits (for preparing new holes in rails and caps at cuts) <input type="checkbox"/> 6mm taps (for re-tapping the capping-strip screw holes after you cross-thread a few of them) <input type="checkbox"/> min. 6 ea - 7/32-inch hex bit socket drill drivers (3/8-inch drive) <input type="checkbox"/> 3/8-inch socket adapters (for use in drills) <input type="checkbox"/> small hand-held metal (fine-toothed) file (for removing metal burrs after cutting) <input type="checkbox"/> minimum 6 ea - #3 screw-gun bits <input type="checkbox"/> Torque-Wrench--long-handled 3/8-inch socket with adapter to accept #3 screw-gun tip Note: torque wrench must accurately read as low as 60 in-lbs (5.2 ft-lbs; 7 Nm) and as much as 240 in-lbs (20 ft-lbs; 27Nm)--(for final torque setting on capping strip screws). <input type="checkbox"/> 1/4" diameter Awl 	<p>For Mixing and Spreading:</p> <ul style="list-style-type: none"> <input type="checkbox"/> heavy duty electric, plug-in, low speed, high torque drill for mixing thick epoxy <ul style="list-style-type: none"> <input type="checkbox"/> min. 2 ea - 3-inch diameter paddle mixers <input type="checkbox"/> min. 2 ea - 1 1/2" diameter "jiffy mixers" <input type="checkbox"/> minimum 6 ea - 2" margin trowels <input type="checkbox"/> Clean or unused, 5-gal or larger, plaster/paint pails to mix epoxy, hold cleaning solvents, etc. <p>For Gunning and Tooling:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 20-oz sausage caulk guns (for silicone and intumescent) <ul style="list-style-type: none"> <input type="checkbox"/> Sausage-gun nozzles (cones) <input type="checkbox"/> 10-oz cartridge caulk guns (for anchor epoxy) <input type="checkbox"/> min. 3 ea. - 3/4" caulk knives <input type="checkbox"/> Utility knives <p>For Cutting Foam:</p> <ul style="list-style-type: none"> <input type="checkbox"/> long-bladed, serrated, chef's knife (or bread knife), or <input type="checkbox"/> hack saw <input type="checkbox"/> miter box or block <p>Other Miscellaneous Tools and Materials:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 2 - plastic spray bottles, (1 bottle with solvent), and (1 bottle with clean water) <input type="checkbox"/> Duct tape <input type="checkbox"/> levels, 2-foot, 4-foot and torpedo-level <input type="checkbox"/> 100-foot tape measure <input type="checkbox"/> combination square <input type="checkbox"/> chalk box with chalk <input type="checkbox"/> flat bar and small pry bar <input type="checkbox"/> rubber mallet <input type="checkbox"/> 5-gal pail of (Acetone* or effective alternative solvent) <input type="checkbox"/> box of clean, dry, lint-free, cloth rags <input type="checkbox"/> vise grips (2-pair) <input type="checkbox"/> shop Vac <input type="checkbox"/> extension cords with 4-way box <input type="checkbox"/> 2 - 9/16" open-end wrenches and/or 9/16" deep drive sockets & ratchets <p>*Solvents mentioned or referred to are toxic and flammable. Observe solvent manufacturer's precautions and refer to MSDS, as well as local and federal requirements for handling and use.</p>
---	--

STAGE 1: Installation of FP Retainer Legs (rails) and Flashing Sheets

The principle used in this installation method for setting the height of the FP System is to tap the mounting flanges of the FP rails down into a wet epoxy-mortar setting bed until the top surface of the joint is at the desired elevation relative to the finished wear-course level.

Check that sufficient height between the top of the structural slab (or curb cast onto and pinned into the structural slab) and finished elevation of the topping exists to accommodate the specific FP model being installed. There should be enough room to accommodate the height of the FP System ordered plus at least 1/4 - 3/8-inch (6-9mm) of setting bed.

STEP 1: Prepare Deck Surface

Using a grinder or blaster, clean and prepare a 6" wide strip on either side of the joint gap (or if a curb is being cast on which to seat the DFR-FP, similarly prepare the top surface of the curb). The resulting concrete surface must be clean, dry, and free of all dirt and contaminants and must be the correct depth below the finished wear course level.

Thoroughly blow clean the deck surface and at least 5-feet of the adjacent work area along the entire joint length.


Any significant unevenness in the deck surface or spalling at the joint edge must be repaired with a suitable patching material using proper shelf geometry for spall repair.

STEP 2: Lay Out the Joint

Lay out the FP rails onto the deck and over the joint-gap so you can become acquainted with the system.

IMPORTANT: Factory-Fabricated Transitions


If your job contains factory-fabricated transitions such as tees, flat 90's, upturns or downturns, these are fixed points and must be installed first. Before continuing with these instruction read "**DFR-FP Addendum 1—Installing Transitions in DFR-FP SYSTEM**" (Page 17)

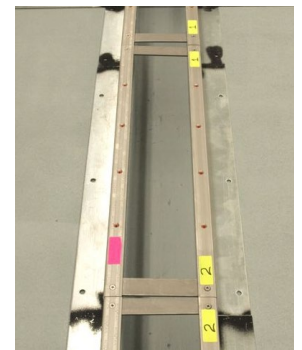

The system is supplied with the rails clamped together by metal spacers at a distance near the midpoint of its movement range. Installation at temperatures other than mean seasonal temperature may necessitate on-site adjustment. Consult EMSEAL or the owner's responsible engineer before proceeding.

DO NOT REMOVE CLAMPING SPACERS BETWEEN RAILS UNTIL TOLD TO DO SO LATER IN THESE INSTRUCTIONS.



Each length is 4 meters or 13.12 ft (approximately 13'-1 7/16") long. If ends are marked with a number that is in sequence with the number of the preceding length. Lay the lengths down, end to end, matching-number to matching-number.

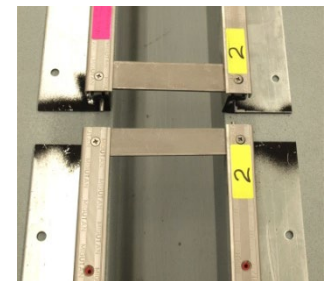

Positive alignment between lengths is made by mating the factory-installed stainless steel joining pins between each length.

Push sections with matching numbers together ensuring that the stainless-steel pins are properly seated.

TIP: Sometimes the metal pins will not align easily. To fix this loosen the screws in the capping strips that hold the clamping spacers. This will give you some 'play' to help with pin alignment. Once aligned, retighten the screws.

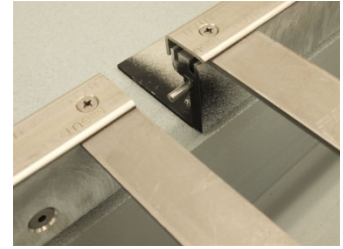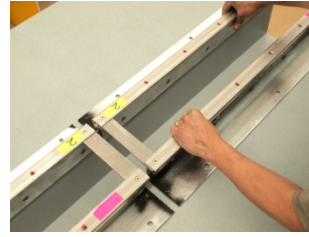

IMPORTANT: In order to perform as a fire barrier, the DFR-FP foam assembly must install into concrete below the metal FP legs. For this to happen, the faces of the mounting rail legs must be flush to the concrete faces of the joint opening.

Using a square, make sure the faces of the FP legs align with the concrete joint faces, ON BOTH SIDES of the joint gap. If the faces of the legs do not align it will be necessary to adjust the spacing between the legs—CONSULT EMSEAL.




Continue the above process along the entire length of the expansion joint system. Check length of final piece(s) and mark for cutting.

NOTE: Where rails are cut leaving more than 3-inches (75mm) of undrilled mounting flange and stainless steel cap it will be necessary to drill and tap new holes to accommodate hardware.

STEP 3: Mark Setting Bed Location

Mark the edge of the mounting flanges with a lumber crayon or chalk line (*this is the line to which you will install the setting-bed epoxy*).

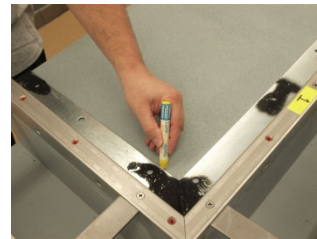

STEP 4: Mark Irregularities in the Decks

Inspect the area under the joint looking for dips, bumps and other irregularities in the deck surface. In these locations you will need more or less epoxy setting bed. Mark these locations with a lumber crayon so you can apply the epoxy mortar as needed to achieve the desired finished system height and so the rails are fully supported everywhere.

STEP 5: Mix Setting Bed Epoxy Mortar









Use the EMSEAL Setting Bed Kit containing epoxy Parts A & B and Sand:

Lift lid-tabs, remove lid and the A and B containers.

Empty the solid content of Part A into another empty 5-gallon mixing pail. Pour in the liquid contents of Part B into the same new pail.

Immediately mix with a heavy-duty mixing drill and

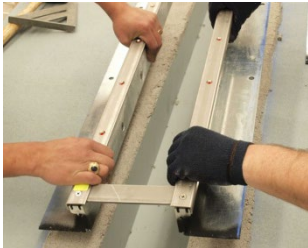

<p>3-inch diameter mixing paddle to a solid gray consistency (45 – 60 sec.).</p>			
<p>Immediately add the sand from the original EMSEAL pail into the A+B mixture. Pour into center of the mixture, while stirring with the heavy-duty mixing drill and 3-inch diameter mixing paddle. Blend the epoxy and sand to a uniform gray color and consistency (approx. 2 minutes after sand is fully added).</p> <p>Be sure to scrape up and down against the sides of the pail to incorporate all of the material.</p>			
<p>STEP 6: Lay Setting Bed</p> <p>Lay epoxy-mortar setting bed approximately <u>3/8-inch (9mm) thick*</u> and about 1/2" (12mm) wider than your chalk line on both sides of joint gap.</p> <p><i>*except as needed to address irregularities in the deck or to achieve desired finished height.</i></p>			
<p>The setting bed must be of consistent thickness across and lengthwise. Ensure that there are no voids that would leave the rails unsupported at any point.</p> <p>TIP: mark a screwdriver or stick with duct-tape, 3/8-inch (6mm) from the tip to use as a depth gauge</p>			
<p>STEP 7: Solvent Wipe Bottom of Mounting Flanges</p> <p>Turn the rails over and solvent wipe the mounting flanges to remove all contaminants.</p> <p>Set rails aside being careful not to re-contaminate them.</p>			
<p>STEP 8: Lower Rails into Wet Setting Bed</p> <p>Place the first length of FP rails into the wet, epoxy-mortar setting bed.</p> <p>Tap the system down into the setting bed until the upper surface is at the required elevation and the rails are level.</p> <p>Ensure that the flanges are fully embedded in the wet epoxy and that no hollow areas exist beneath the flanges.</p>			

STEP 9: Align Face of Rails with Joint Faces

Using a square, make sure the faces of the FP legs align with the concrete joint faces, ON BOTH SIDES of the joint gap. (As previously mentioned, if the faces of the legs do not align it will be necessary to remove the capping strips from one side of the joint and free one end of the spacers to adjust the gap between the legs so that they do align with the joint faces. Consult EMSEAL).





STEP 10: Level Rails

Using a level, make sure the joint is level side to side and lengthwise*.

Use a rubber mallet to drive the rails into the wet epoxy mortar to achieve the desired elevation and to level the rails.


*or to match slope in deck for drainage as designed

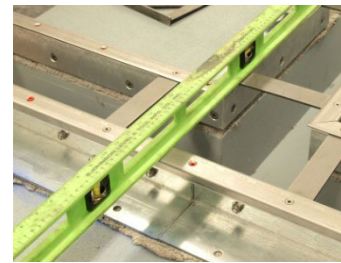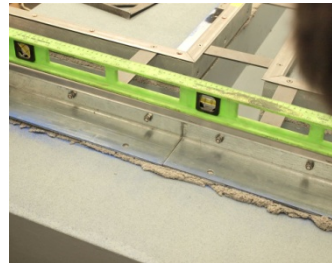

STEP 11: Install Next Rail Length

Position the next length of FP rail making sure it is interlocked with the previous section.

Alignment between lengths is made with stainless steel pins set into one end of the rails. Insert the pins into the holes of the adjoining piece. **TIP:** Sometimes the metal pins will not align easily. To fix this loosen the screws in the capping strips that hold the clamping spacers. This will give you some 'play' to help with pin alignment. Once aligned, retighten the screws.

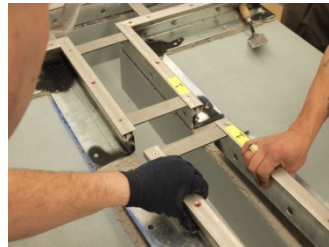

Ensure that joints are properly executed to achieve proper appearance and performance. There should be no gaps between adjoining capping strips.


Tap the ends of the rails to achieve proper alignment and remove any epoxy that prevents the legs from coming together.



Repeat procedure until final section is reached.



Install final section by lifting previous section slightly until the sections can be interlocked.

Ensure that all sections are level along and across the joint and that the joint faces align with the faces of the FP legs.

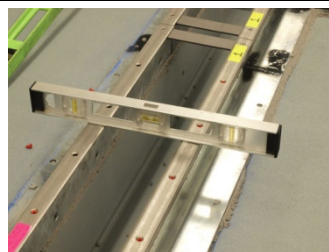


Using a margin trowel remove epoxy that squeezed out from under the mounting flanges into the joint.

Use the extra material to pack and fill in voids under the mounting flanges

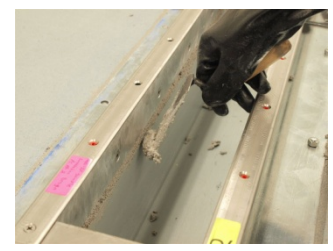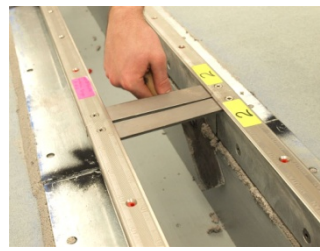

Tool epoxy along the outer edges of the mounting flanges into a cant-strip to make a ramp for the deck waterproofing material.

Allow epoxy-mortar setting bed to cure in accordance with the epoxy manufacturer's recommended curing times shown on the pails.

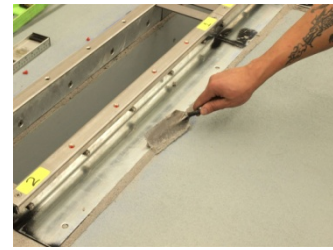

Clean your epoxy trowels, mixers, etc. in buckets using solvent and a wire brush.

TIP: Cleaning tools while the epoxy is still wet will save a lot of time.



STEP 12: Drill Anchor Holes

IMPORTANT: DO NOT drill anchor holes until the setting bed epoxy has hardened sufficiently to be drillable.


Using one of the threaded-rod anchors with a nut screwed flush to the top as a guide; mark the shank of the drill-bit for the correct anchor-hole depth.



Drill 3/8" diameter holes for the 5/16" diameter anchors (or as otherwise specified for the particular job or anchoring system-- consult EMSEAL).

Drill holes to a depth to suit the full length of the anchors below the nut.

NOTE: If obstructions or other conditions prevent full depth embedment, drill holes as appropriate ensuring that anchor-bolts embed at least 3-inches (75mm) into concrete. For depths less than 3-inches (75mm), consult EMSEAL.

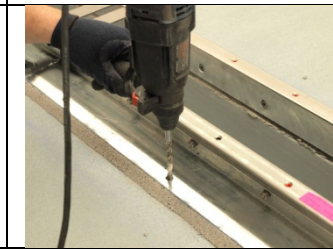

Vacuum dust piles from around holes. **Blow** dust from inside the holes using a forced-air blast and then **vacuum** again.

TIP: a shop-vac on "blow" will work for this.




STEP 13: Install Epoxy Anchors

Prepare all the threaded-rod anchors by screwing nuts onto one end.

The two-component anchor epoxy is supplied in 10-oz caulk tubes with static mixing nozzles. Install the cartridge into a cartridge caulk gun, remove the cap and cut off the wire-tie-off. Screw a static mixing nozzle onto the cartridge



Gun epoxy through the static mixing nozzle into a pail or garbage can until a uniform light-gray color is achieved

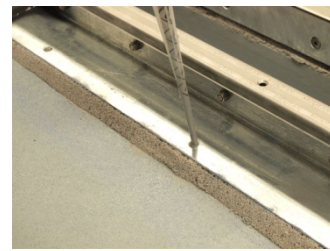

Inject anchor epoxy into holes

CAUTION: pay attention to the cure times chart on the anchor-epoxy cartridge and the temperature at time of installation. Anchors MUST be placed into wet epoxy. Don't get too far ahead.

Install anchors into wet epoxy



Spin anchor **once** 360° to ensure epoxy completely surrounds and coats the anchor.

Remove excess epoxy from around the nut that might obstruct tightening later.


Allow epoxy to cure according to chart(s) on epoxy cartridge.



STEP 14: After Setting-Bed Epoxy is CURED, Cut Through Clamping Spacers to allow free movement

IMPORTANT! If at the end of the day you have installed the rails into setting bed and/or anchored the rails using the threaded rod anchors, you must cut through the clamping spacers between the two sides of each rail using a grinder with metal cutting "cut-off" blade.

THIS IS IMPORTANT BECAUSE AS THE TEMPERATURE DROPS OVERNIGHT, THE JOINT WILL OPEN AND WILL SERIOUSLY DAMAGE THE METAL COMPONENTS IF THEY REMAIN RIGIDLY CONNECTED TOGETHER.

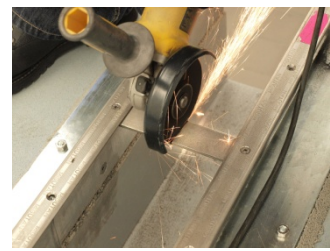

STEP 15: Tighten Nuts

With anchors secured in **cured** epoxy, tighten the nuts onto the mounting flanges.

IMPORTANT: In cases where anchors protrude above the nut, cut off excess anchor height and grind to remove any sharp edges that might damage waterproofing membrane. DO NOT cut holes in flashing sheets to go over protruding anchors.



STEP 16: Remove Stainless Steel Capping Strips and Spacers

Before you can install the DFR-FP foam, you must remove the stainless steel capping strips and the clamping spacers.

IMPORTANT: Label the locations of the capping strips so that they can be reinstalled in the same locations. Do not mix them up, as the pre-drilled holes in the retainer caps may not line up with the holes in the rails.



STEP 17: Remove Shipping Gaskets and Plugs

Remove rubber filler strips from "reglets" in top of rails and remove plastic plugs from the capping strip holes in the top of the rails.




STEP 18: Install Rubber Flashing Sheets

Roll out flashing sheets along the edges of the joint.

Press locking rib into inner groove (closest to the joint-gap) on rail.

(NOTE: the outer groove is not used with DFR-FP System and will be overlapped by the side flashing sheet).

Tap the sheet with a rubber mallet to ensure the locking rib is securely seated

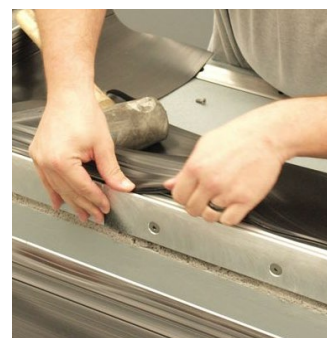

STAGE 2: INSTALLING THE FOAM INTO THE FP RETAINER LEGS

Start at one end being sure to make the termination point watertight using a factory-fabricated termination, or field-executed transition to one of EMSEAL's vertical-plane products. In cases where the joint ends at the end of the slab such that water drains off the joint, be sure to coat the exposed foam end with silicone—CONSULT EMSEAL.

STORAGE and HANDLING:

The DFR-FP foam comes pre-compressed to less than the joint size.

NOTE: The precompressed foam in the DFR-FP system will expand faster when hot and slower when cold.

On hot days Above 80°F (26°C):

Keep the material in its cardboard shipping cartons, out of direct sunlight (preferably on an intermediate, shaded deck. If no shade is available on a really hot day, keep the material inside an air-conditioned job van, or open the lids of the shipping cartons and lay bags of ice over the material. This will give you more working time.

On cold days Below 41°F (5°C):



If it is sunny out, open the cartons and set the material in the sun. Or, keep the material in a heated job-van or tent until immediately prior to use.

STEP 19: Mix Epoxy Adhesive

EMSEAL 820 epoxy adhesive may be used in the 41°F (5°C) to 95°F (35°C) temperature range.

Using a trowel, transfer the entire contents of Part B (hardener) into the contents of Part A (base).

Mix the material thoroughly with a drill and mixing paddle. Scrape the walls and bottom of the container to ensure uniform and complete mixing.

Mix to a uniform gray color with no black or white streaks.

Ensure that the mixed epoxy adhesive is applied to the substrate before the pot life has expired (10 - 30 minutes depending on the ambient temperature).



STEP 20: Apply Epoxy Adhesive to Faces of FP Legs and Concrete

Apply a thin coat (no more than 1/16" thick) to both joint faces to a depth of 6-inches (150mm)—be sure to extend epoxy between parapet or split column faces of transitions to upturns.

WARNING: Epoxy will harden more quickly when left in the pot--get it onto the joint face as soon as possible.

The epoxy must still be wet when installing the DFR-FP foam into the joint-opening.

If the epoxy cures before installing the DFR-FP then reapply new epoxy. If work is interrupted for more than 2 hours after initial cure then grind the old epoxy and apply new wet epoxy.

IMPORTANT: While one or more workers are applying epoxy to the joint faces, others must prepare the DFR-FP foam assemblies.



STEP 21: Cut the Shrink Wrap Packaging

Cut shrink-wrap by running a utility knife along the hardboard sides. (DO NOT cut along silicone bellows surfaces).

IMPORTANT: **Work quickly** and deliberately after cutting the shrink-wrap to avoid material expanding beyond a usable size.



STEP 22: Remove Shrink-Wrap and Hardboard Packaging

Remove and discard shrink-wrap and hardboard.



Wipe Release Agent Off Silicone Face, Top and Sides

For packaging and production reasons, the silicone facing is coated in the factory with a release agent.

Prior to installation, this release agent must be wiped off all surfaces that will later make contact with liquid-applied silicone. This includes the face, tops and grooves of the bellows next to the face, and along the sides.

Lightly, quickly and thoroughly wipe the cured silicone facing with a lint-free rag made damp with water to remove the release agent.



STEP 23: Allow Foam to Expand to Suit Joint-Gap Size

Check the compressed size of the foam against the joint gap size. Allow the foam to expand to the width of the joint. The foam should fit snug enough to hold its own weight without sagging.



STEP 24: Insert Material into Wet Epoxy

Leaving the end of the foam that will join to the next length stick up out of the joint, lower the foam into the wet epoxy on the joint faces.


Press down firmly on the rest of the foam until it is level with the tops of the side sheets in the FP rails.



STEP 25: INSTALL Next Lengths

STEP 26: Prepare Faces to Be Joined

To remove the factory-applied release agent, thoroughly wipe the cured silicone face, tops and grooves of the bellows next to the face, and along the sides with a lint-free rag made damp with water.

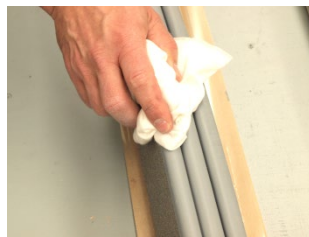

STEP 27: Apply Intumescent To End Of Foam

Using the 20-oz sausage caulk gun and the sausages of intumescent provided, gun the intumescent caulk onto the foam surface and across the spline and the ends to be joined. Spread the intumescent caulk to an even thickness using a caulk knife.



STEP 28: Apply Silicone To End Of Bellows

Using a 20-oz sausage gun and the sausages of silicone provided, gun a bead of silicone along the face of the factory-cured silicone bellows.





STEP 29: Install and Join To Previous Length

Unpack the foam and lower it into the joint.

Line up the join with the protruding end of the previously installed stick.

Push the stick towards the joint while easing the foam into the wet epoxy on the rail faces.

After the middle of the stick is set in the joint, push down on both sides of the joint until it is properly seated. (NOTE: Some of the silicone tooled to the face should squeeze out between the bellows faces).

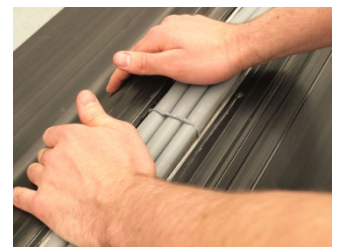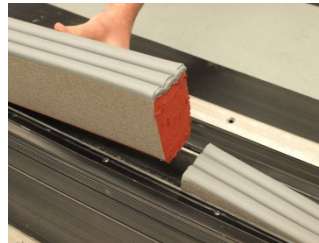

STEP 30: Tool the Joining Silicone into and Across the Bellows

Use a caulk knife to tool the squeezed-out silicone from the grooves of the bellows and blend the join between the two sticks. Make sure there are no gaps or pin holes in the silicone at the joint.

STEP 31: Repeat Process

Repeat until all of the joint assemblies have been completely installed.




STAGE 3: Sealing and Closing the FP Capping System

STEP 32: Clean Bellows

Using lint-free cotton rags and solvent clean the silicone bellows next to the joint faces to receive the silicone sealant bands and corner beads.

Note: if you did not clean off the factory release agent in STEP 26, do it now.

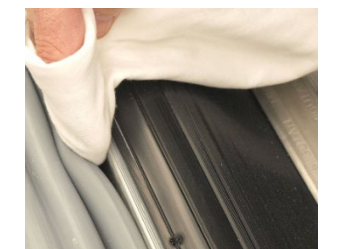

STEP 33: Inject Silicone Sealant Bands

Using the silicone sausages provided and a sausage gun and cones, inject sealant bands between the foam, silicone bellows, and rail faces. Inject a deep, minimum 3/4" (20mm), band of liquid silicone.


TIP: use the tip of a caulk knife twisted between the rail and the silicone bellows to make an opening into which to push the cone tip.

IMPORTANT: On installations of long runs of material, have one worker drop back after the installation of the first several lengths to install the silicone sealant bands before the epoxy cures.



STEP 34: Install Silicone Lap Sealant to Top of Rails and onto Flashing Sheet Edge

Gun a band of silicone to cover the visible top of the aluminum rails and that bridges onto the edge of the side flashing sheets.

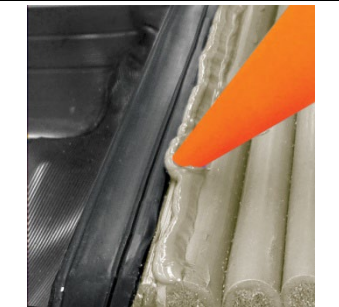


STEP 35: Tool Silicone Sealant Bands and Lap Sealant

Using a caulk knife, tool the silicone lap sealant and the silicone that squeezed out after injecting the sealant bands. Tool this silicone to form a band of sealant from the top of the FP flashing sheet to the top of the silicone bellows on the foam



STEP 36: Install Capping Strips

Install stainless steel capping strips, aligning strips at screw holes.

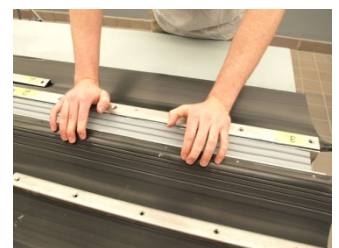


Locate the hole for the stainless steel screw at the beginning of the first section of the rail and make a hole in the rubber of the flashing sheet using a 1/4" awl.



STEP 37: Place Nylon Washers


IMPORTANT: Each capping strip screw is installed through a nylon washer. Place the washers in the holes and insert screws through them.

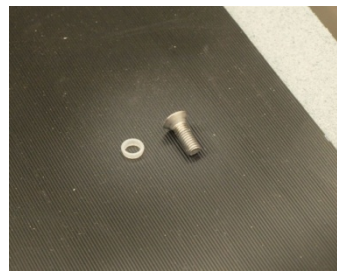

STEP 38: Install Capping Strip Screws


Using the stainless steel screws and nylon seating washers supplied anchor the first section of the stainless steel retainer cap.

Continue to install all screws using a drill driver. Be sure not to over tighten.

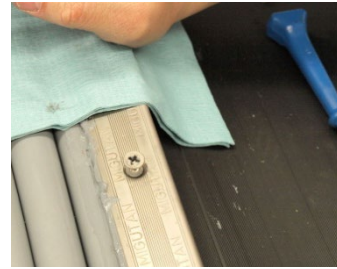


IMPORTANT: Use a torque wrench to do the final tightening of the capping strip screws to 60 in-lbs (5.2 ft-lbs; 7 Nm).

Keep the screw bit fully and firmly inserted into the screw. If you don't you will strip the screw head.

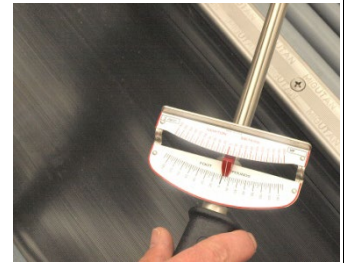

IMPORTANT: If you strip or cross-thread a screw while installing it, remove the screw and use a 6mm tap and to manually re-thread the hole. Reinstall the nylon washer and screw.

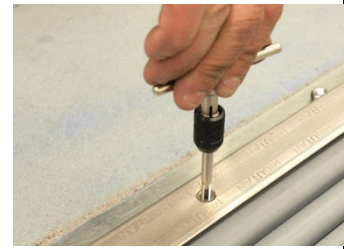

STAGE 4: INTEGRATE FLASHING SHEETS INTO WATERPROOFING MEMBRANE

Principle: The FP flashing sheets are installed into a sandwich with layers of the buried deck waterproofing system. Each layer is fully adhered to the next. Usually this is done using hot-rubberized asphalt membranes. (NOTE: If using other systems be sure to adhere each layer to the bottom and top surfaces of the FP flashing sheets using mastics or splicing methods designed for use with the membrane being used).

Pull the side sheets up over the FP assembly and hold them there with weights.

Apply the first layer of waterproofing material across the mounting flanges and all the way up the FP legs to just under the pulled-back FP flashing sheet. Release the FP flashing sheet and press it into the membrane—BE SURE to press the flashing sheet firmly into the corner between the leg and the mounting flange. Eliminate all bubbles and puckers.

Apply another layer of the waterproofing material over the top and up the face of the FP flashing sheet. Embed and adhere the protection course over and up the flashing sheet sandwich.

NOTE: At this point water testing, if required, would occur.



STAGE 5: INSTALLING WEAR COURSE--PAVERS, TOPPING SLAB, ASPHALT, GREEN ROOF, etc.

INSTALL WEAR COURSE: The wear course may commonly consist of pavers, concrete, asphalt, or garden or green roof components.

CONCRETE TOPPING SLAB: Form a control joint between the back edge of the stainless steel capping strips and the concrete. Once the slab has cured, strip the form and seal this joint with a self-leveling liquid sealant (by others).

PAVERS and other loose-laid wear course systems: No control joint required.



DFR-FP Addendum 1: Installing Transitions in DFR-FP SYSTEM

IMPORTANT!

This is an addendum to "Installation Instructions: DFR-FP (DFR For Plaza Decks and Split Slabs). Do not install this material until all members of your crew have read and understand all instructions. If any of the crew do not understand any part of these instructions call EMSEAL: USA & Canada: 1-800-526-8365 or 508-836-0280

INSTALLING TRANSITIONS AND TERMINATIONS

Where expansion joints begin, end and run adjacent to, over, under, or around obstructions such as walls, columns, curbs, sidewalks, planters etc., are typically where leaks persist even after straight runs of joints have been properly sealed. Options exist to properly seal these areas.

Transitions and Terminations in Metal Parts:

It is usual for the contractor to order factory-fabricated transitions and terminations, as welded assemblies. The components that make up any factory-fabricated item are welded together in the configuration represented by contractor-supplied drawings and dimensions.

Transitions and Terminations in the Side Flashing Sheets:

NOTE: It is critical to achieving watertightness that wherever a transition or termination exists, the side flashing sheets be properly welded to follow all contours at the condition so that they may be properly integrated with the deck waterproofing materials.

It is possible following proper training from an EMSEAL field technician for the contractor to fabricate transitions and terminations in the heat-weldable side flashing sheets in the field. However, it is more efficient and usual to order transitions and terminations in the side flashing sheets as factory-fabricated, welded items along with the corresponding welded metal parts. The components that make up any factory-fabricated item would be welded together in the configuration represented by contractor-supplied drawings and dimensions. NOTE: It is difficult to accurately represent all substrate contours that the side flashing sheets will come in contact with. For this reason factory-welded side sheets cannot be guaranteed to fit and may require field modification by the contractor.

Transitions and Terminations in DFR-FP Foam:

Most transitions and terminations in the foam are planned for in consultation with EMSEAL at time of ordering. Some transitions (like curb transitions and treads and risers for example) are factory-fabricated by EMSEAL to the contractors' field measurements. Other transitions and terminations are field-assembled using custom components ordered as agreed. For most flat changes in direction in the horizontal plane, EMSEAL supplies the DFR-FP SYSTEM assembly configured for field joining at the change in direction. In addition connection of the transition pieces is executed at butt joints to straight lengths using methods represented in principle in these instructions and/or as trained by an EMSEAL field technician.

Welded End-Dam Terminations at Vertical-Plane Terminations:


Welded end-dam terminations in flashing sheets at end of joint runs are required wherever the joint ends against a perimeter pour, curb, column or anywhere the deck waterproofing terminates on a vertical surface. An end-dam consists of a folded and welded "boot" in the FP flashing sheet that is embedded and covered in waterproofing membrane materials and is mechanically fixed to the vertical substrate with a termination bar and sealant. The wear-course or topping slab is poured up to and over this termination point and the control joint formed by the pour is sealed with a liquid sealant by others. Welded end-dam terminations can be provided factory made by EMSEAL to field measurements or can be field executed. Instruction for proper field welding is available from the on-site EMSEAL technician. Contact EMSEAL to coordinate instruction.

IMPORTANT: Always Start Installation at Factory-Fabricated Transitions

If your job contains factory-fabricated transitions such as tees, flat 90's, upturns or downturns, these are fixed points and must be installed first.

This applies to installing transition pieces in:

- 1) the FP legs,
- 2) the FP flashing sheets,
- 3) the DFR-FP foam assemblies

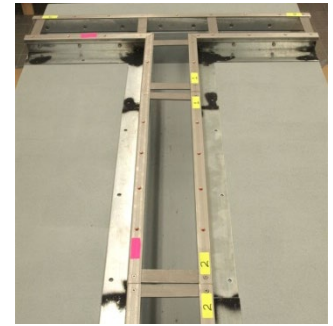


1) FP RAIL TRANSITIONS

Place the factory-fabricated transition in the metal FP rails into the wet, epoxy-mortar setting bed.

Tap the system down into the setting bed until the upper surface is at the required elevation and the rails are level.

Ensure that the flanges are fully embedded in the wet epoxy and that no hollow areas exist beneath the flanges.

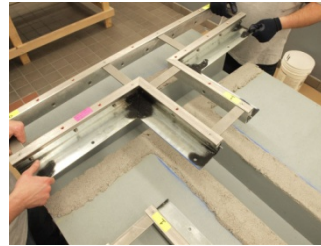

Working away from the ends of the transition, connect the straight lengths of rail and install straight lengths.

Position the first straight length of FP rail making sure it is interlocked with the transition.

Alignment and connection between lengths is made with stainless steel pins set into one end of the rails. Insert the pins into the holes of the adjoining piece.

TIP: Sometimes the metal pins will not align easily. To fix this loosen the screws in the capping strips that hold the clamping spacers. This will give you some 'play' to help with pin alignment. Once aligned, retighten the screws.

Install, level, and anchor the rest of the rails in accordance with the standard DFR-FP Installation Instructions starting at **Step 11**.



2) RUBBER FLASHING SHEET TRANSITIONS

Roll out flashing sheets along the edges of the joint.

Start installation at transitions with factory-made transition pieces. Working away from the fixed transition points, install the flashing sheets in accordance with the standard DFR-FP Installation Instructions starting at **Step 18**.



3) DFR-FP FOAM TRANSITIONS

For most flat changes in direction in the horizontal plane, EMSEAL supplies the DFR-FP SYSTEM assembly configured for field joining at the change in direction. In addition connection of the transition pieces is executed at butt joints to straight lengths using methods represented in principle in these instructions and/or as trained by an EMSEAL field technician.

The following describes the installation of a tee starting with the cross piece of the tee. The principle is the same for flat direction changes.

Cut the Shrink Wrap Packaging

Cut shrink-wrap by running a utility knife along the hardboard sides. (DO NOT cut along silicone bellows surfaces).

IMPORTANT: Work quickly and deliberately after cutting the shrink-wrap to avoid material expanding beyond a usable size.



Remove Shrink-Wrap and Hardboard Packaging

Remove and discard shrink-wrap and hardboard.



Wipe Release Agent Off Silicone Face, Top and Sides

For packaging and production reasons, the silicone facing is coated in the factory with a release agent.

Prior to installation, this release agent must be wiped off all surfaces that will later make contact with liquid-applied silicone. This includes the face, tops and grooves of the bellows next to the face, and along the sides.



Lightly, quickly and thoroughly wipe the cured silicone facing with a lint-free rag made damp with water to remove the release agent.



Allow Foam to Expand to Suit Joint-Gap Size

If the foam is expanding slowly, allow the foam to expand to the width of the joint then lower the foam into the wet epoxy on the joint faces.

Press the material down firmly until even with the tops of the side sheets in the rails.



Install Intersecting Lengths

At tees and flat-90's, intersecting lengths are butt joined, foam to foam.

Prepare Transition Faces to Be Joined

TIP: On hot days, the silicone liquid sealant used as a joining material can be applied to the ends of each stick prior to unpacking them. To do this, carefully cut and peel the plastic shrink wrap away from around the end of the stick.

CAUTION: DO NOT cut on the silicone bellows!



To remove the factory-applied release agent, thoroughly wipe the cured silicone face, tops and grooves of the bellows next to the face, and along the sides with a lint-free rag made damp with water.



Apply Intumescent To End Of Foam

Using the 20-oz sausage caulk gun and the sausages of intumescent provided, gun the intumescent caulk onto the foam surface and across the spline and the ends to be joined. Spread the intumescent caulk to an even thickness using a caulk knife.



Apply Silicone Sealant at Bellows Join

Using a 20-oz sausage caulk gun and the sausages of silicone provided, gun a bead of silicone along the face of the edge of the factory-cured silicone bellows at the top of the DFR-FP foam.



Install Into Side of In-Place Length

Lower the joining piece into the wet epoxy on the joint faces and press the joining piece firmly into the side of the previously installed length.


(Notice how the bow in the side of the cross piece is re-compressed by the joining piece—ensuring a compression fit).



Tool and Blend Squeezed-Out Silicone

Tool the silicone that squeezes out at the join to blend it with the bellows.

(DO NOT allow the silicone to fill the folds of the bellows).

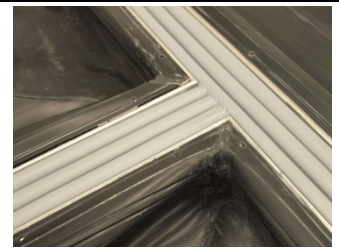


Install Straight-Run Lengths

Having installed the transition pieces, straight lengths can be installed in all directions off the transition in accordance with the standard DFR-FP Installation Instructions starting at **Step 29**.


Cutting Transition Sticks to Size

NOTE: If using less than a full length, measure and mark the length needed. Then, using your bread knife, score the hardboard packaging, cut the shrink-wrap on all four sides of the stick

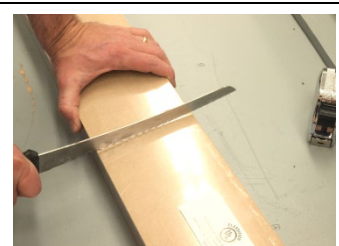

Cut the shrink-wrap lengthwise along the hardboard of the piece you are going to use.

Bend the hardboard back at the score mark until it snaps.

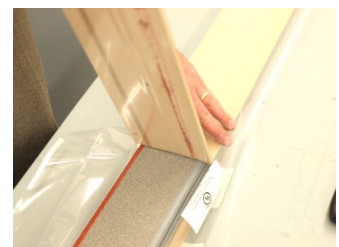

Remove the hardboard.

Using the bread knife, make a straight, square cut through the foam.

TIP: if the knife sticks, spray the knife blade lightly with water.

IMPORTANT: If you are not going to use the rest of the stick, re-wrap the hardboard package using duct tape to prevent the unused piece from expanding.



If any of the crew do not understand any part of these instructions call EMSEAL:
1-800-526-8365 (USA & Canada) or 508-836-0280

Publication Note: All literature is deemed accurate at the time of publication. EMSEAL will publish newer product literature to reflect updates and changes in specifications. Please consult EMSEAL for the most accurate support material. www.emseal.com.