
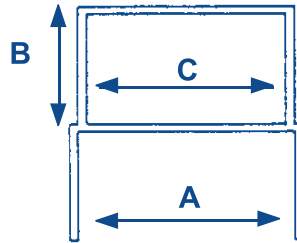


JOINT FORMERS

EXPANSION BOARD CAPS


Expansion Board Caps provide clean, sharp lines for sealants. They eliminate the difficulty of removing wooden formers.

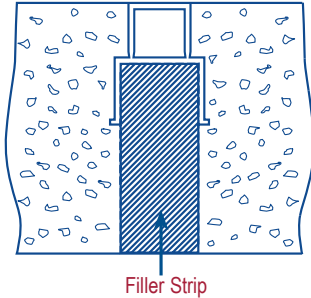

Cat. #	A	B	C
1018	3/8"	3/8"	5/16"
1019	1/2"	3/8"	5/16"
1020	1/2"	1/2"	7/16"
1021	3/4"	1/2"	5/8"
1022	1"	1/2"	7/8"


ZIP JOINTS

Zip Joints are easily installed joint formers designed to provide positive control of transverse construction or expansion joints. The two-part assembly is designed to permit removal of the top portion after the concrete has hardened, thereby creating a clean, neatly defined void for application of caulk or sealant when specified.

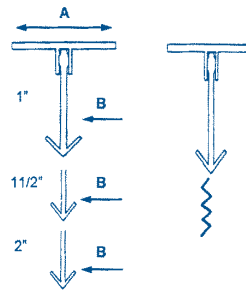

Cat. #	A	B
1010	1"	1"
1011	1"	1 1/2"
1012	1"	2"


WEEP TUBES

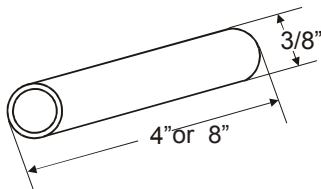

BoMetals Weep Tubes shall be placed to insure that they are correctly positioned in the masonry joint to guarantee air movement from the cavity to the outside of the wall. Typical placement would be for the one end of the weep tube to be flush with the outside of the joint and the opposite end to project into the cavity of the wall. Typical locations would be no greater than 24" on center. Care should be taken during mortar placement to prevent excessive movement of the weep tubes to insure against displacement. Always thoroughly and systematically inspect mortar around the weep tubes to make certain that the weep tube is free from obstruction.

BAR FOUNDATION CHAIRS

Bar Foundation Chairs are widely used to support rebar when pouring footers. They are simple to use, inexpensive, and convenient. As you see below, we have a 2-Bar and a 3-Bar manufactured from 12-gauge wire. There are 100 per box.

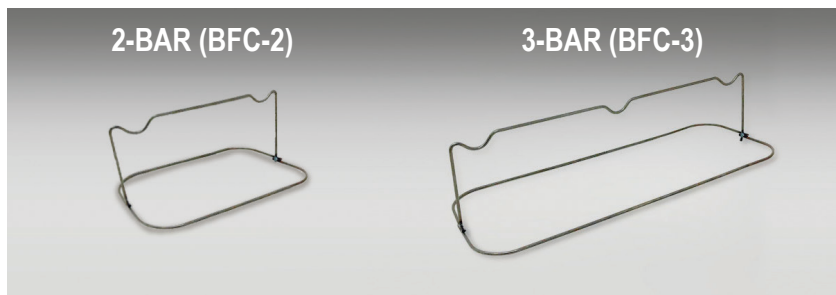

8" wide x 3" high
Bar supports at 6" spacing

12" wide x 3" high
Bar supports at 5" spacing