


# RIGIDLAM® LVL Stair Stringers

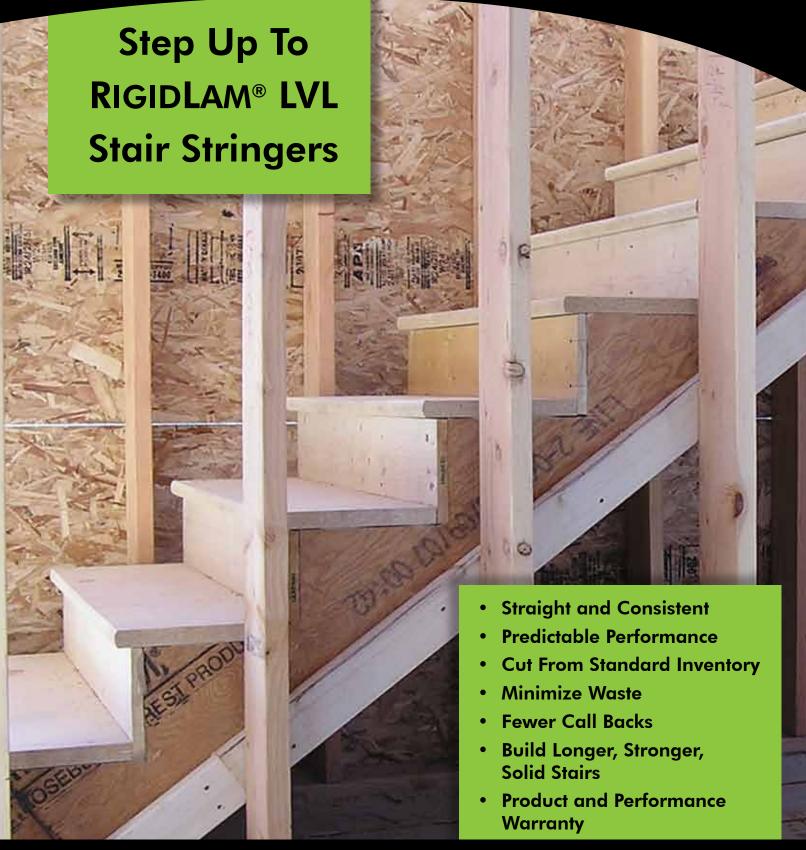

# RIGIDLAM® LVL STAIR STRINGERS - Maximum Horizontal Stair Stringer Run

1.3E RigidLam LVL										
1½" Thick LVL										
Gross Tread Width										
Stringer	30	6"	42"	44"	48"					
Depth	2 Stringers	3 Stringers	3 Stringers	3 Stringers	3 Stringers					
40 PSF Liv	ve Load and 1	2 PSF Dead L	oad							
91/2"	4'-10"	5′-5″	5'-2"	5′-1″	5′-0″					
11 <sup>7</sup> /8"	8′-8″	9'-10"	9'-4"	9′-3″	9′-0″					
14"	12'-2"	13′-9″	13′-1″	12'-11"	12′-7″					
16"	15'-5"	17'-5"	16′-7″	16'-5"	15'-11"					
100 PSF L	ive Load and	12 PSF Dead	Load							
91/2"	4'-3"	4'-9"	4'-7"	4'-6"	4'-5"					
11 <sup>7</sup> /8"	7′-3″	8'-2"	7′-9″	7′-8″	7′-6″					
14"	9'-11"	11'-2"	10′-8″	10′-6″	10′-3″					
16"	12'-5"	14'-0"	13′-5″	13'-3"	12'-11"					

1.5E RigidLam LVL										
	1½" Thick LVL									
Gross	Gross Tread Width									
Stringer	30	6"	42"	44"	48"					
Depth	2 Stringers	3 Stringers	3 Stringers	3 Stringers	3 Stringers					
40 PSF Liv	ve Load and 1	2 PSF Dead L	oad							
91/2"	5′-0″	5′-8″	5′-5″	5′-4″	5′-2″					
11 <sup>7</sup> /8"	9′-1″	10′-3″	9′-9″	9′-8″	9′-5″					
14"	12′-8″	14'-4"	13′-8″	13′-6″	13′-2″					
16"	16′-1″	18'-2"	17'-4"	17'-1"	16′-8″					
100 PSF L	ive Load and	12 PSF Dead	Load							
91/2"	4'-5"	5′-0″	4'-9"	4'-8"	4'-7"					
117/8"	7′-7″	8′-6″	8'-2"	8′-0″	7′-10″					
14"	10'-4"	11'-8"	11'-2"	11'-0"	10′-8″					
16"	13′-0″	14'-8"	14'-0"	13′-9″	13′-5″					

2.0E RigidLam LVL										
	1½" Thick LVL									
Gross	Tread Width									
Stringer	36	5"	42"	44"	48"					
Depth	2 Stringers	3 Stringers	3 Stringers	3 Stringers	3 Stringers					
40 PSF Liv	ve Load and 1	2 PSF Dead L	oad							
91/2"	5′-6″	6'-2"	5'-11"	5′-10″	5′-8″					
11 <sup>7</sup> /8"	9'-11"	11'-3"	10′-8″	10′-6″	10′-3″					
14"	13′-10″	15′-8″	15'-0"	14'-9"	14'-4"					
16"	17'-7"	19'-10"	19′-0″	18′-9″	18′-3″					
100 PSF L	ive Load and	12 PSF Dead	Load							
91/2"	4'-10"	5′-5″	5'-2"	5′-1″	5′-0″					
11 <sup>7</sup> /8"	8′-3″	9′-3″	8'-10"	8′-9″	8'-6"					
14"	11'-3"	12′-9″	12'-2"	12'-0"	11′-8″					
16"	14'-2"	15'-11"	15'-3"	15'-0"	14'-8"					

## How To Use Chart

- 1. Determine grade and thickness of Roseburg RigidLam LVL
- 2. Locate appropriate table
- 3. Locate appropriate load (40 or 100 psf live load)

#### **General Notes**

- For 40/12 loading (residential), stringer runs are based on a rise of 7-3/4" (maximum per 2006 IRC) and a run of 11" (1" longer than minimum run of 10" per 2006 IRC).
- For 100/12 loading (commercial), stringer runs are based on a rise of 7" (maximum per 2006 IBC) and a run of 11" (minimum per 2006 IBC).
- Consult a design professional for allowable stringer run if above rise and/or run
  values are exceeded.
- Stringer runs are based on deflection criteria of L/360 Live Load and L/240 Total Load.
- All stringer runs are based on a 100% duration of load.
- Stringer runs account for self-weight of member.

1.3E RigidLam LVL 13/4" Thick LVL **Tread Width** Gross 36" Stringer 42" 44" 48" Depth 2 Stringers 3 Stringers 3 Stringers 3 Stringers 3 Stringers 40 PSF Live Load and 12 PSF Dead Load 5′-4″ 91/2" 5'-0" 5'-8" 5'-5" 5'-3" 9'-8" 9'-1" 9'-5"  $11^{7}/8''$ 10'-3' 9'-10" 12′-9″ 14'-4" 13′-6′ 13′-2″ 14" 13'-9" 18'-2 17'-5" 16" 16'-2' 17'-2 16'-9' 100 PSF Live Load and PSF Dead 4'-9" 4'-7" 91/2 4'-5' 5'-0" 4'-9' 7'-10" 7'-7"  $11^{7}/8^{6}$ 8'-6" 8'-2" 8'-1" 10′-5″ 11′-8″ 11'-2" 11'-0" 10′-9″ 14" 16" 13′-0″ 14'-8" 14'-0" 13'-10" 13′-6″

1.5E RigidLam LVL										
	1¾" Thick LVL									
Gross			Tread Width							
Stringer	30	6″	42"	44"	48"					
Depth	2 Stringers	3 Stringers	3 Stringers	3 Stringers	3 Stringers					
40 PSF Liv	ve Load and 1	2 PSF Dead L	oad							
91/2"	5′-3″	5′-11″	5′-8″	5′-7″	5'-5"					
11 <sup>7</sup> /8"	9′-6″	10′-9″	10'-3"	10′-1″	9'-10"					
14"	13′-3″	15'-0"	14'-4"	14'-2"	13′-9″					
16"	16'-10"	18′-11″	18'-2"	17′-11″	17′-6″					
100 PSF L	ive Load and	12 PSF Dead	Load							
91/2"	4'-8"	5′-3″	5′-0″	4'-11"	4'-10"					
11 <sup>7</sup> /8"	7′-11″	8'-11"	8′-6″	8′-5″	8'-2"					
14"	10'-10"	12′-3″	11′-8″	11′-6″	11′-3″					
16"	13′-7″	15'-4"	14'-8"	14'-5"	14'-1"					

	2.0E RigidLam LVL										
	1¾" Thick LVL										
Gross	ross Tread Width										
Stringer	30	6″	42"	44"	48"						
Depth	2 Stringers	3 Stringers	3 Stringers	3 Stringers	3 Stringers						
40 PSF Liv	ve Load and 1	2 PSF Dead L	oad								
91/2"	5′-9″	6'-6"	6'-2"	6'-1"	5′-11″						
11 <sup>7</sup> /8"	10'-4"	11′-9″	11′-3″	11′-1″	10′-9″						
14"	14'-6"	16'-5"	15′-8″	15'-6"	15'-1"						
16"	18′-5″	20′-9″	19'-10"	19′-7″	19′-1″						
100 PSF L	ive Load and	12 PSF Dead	Load								
91/2"	5′-1″	5′-8″	5′-5″	5'-4"	5′-3″						
11 <sup>7</sup> /8"	8′-7″	9′-9″	9'-3"	9'-2"	8'-11"						
14"	11′-10″	13′-4″	12′-9″	12′-7″	12′-3″						
16"	14'-10"	16'-9"	15'-11"	15'-9"	15'-4"						

- 4. Locate appropriate gross depth of LVL (9-1/2", 11-7/8", 14" or 16")
- Determine maximum allowable horizontal stringer run based on tread width and number of stringers
- Stringers are unstable until connections at low and high ends are completed and treads are attached.
- Use subfloor adhesive to minimize squeaks and improve stair performance.
- When stringer is in direct contact with concrete, use moisture barrier.
- Refer to appropriate building code for story height restrictions.
- For loading and/or framing conditions outside the scope of this document, consult a design professional.
- Refer to Roseburg's EWP Design Guide for RigidLam LVL storage and handling information.

RIGIDLAM LVL CODE EVALUATION ICC ESR-1210

## **Installation Guidelines**



**DO NOT** notch or drill holes in stringer



**DO NOT** overcut stringer. Use hand saw to finish cut



DO NOT support stringer on nailer only




**DO NOT** walk on stringers until treads are attached

## RigidLam® LVL Allowable Design Stresses<sup>1</sup>

		1.3E RigidLam LVL	1.5E RigidLam LVL	2.0E RigidLam LVL
Modulus of Elasticity (MOE) <sup>2</sup> – Edgewise or Flatwise	E (psi) =	1,300,000	1,500,000	2,000,000
Bending – Edgewise <sup>3,4</sup>	F <sub>b</sub> edge (psi) =	2,250	2,250	2,900
Bending – Flatwise	F <sub>b</sub> flat (psi) =	2,250	2,250	2,900
Horizontal Shear - Edgewise	F <sub>v</sub> edge (psi) =	200	220	285
Horizontal Shear - Flatwise	F <sub>v</sub> flat (psi) =	130	130	130
Compression Perp. To Grain <sup>2</sup> - Edgewise	F <sub>c perp</sub> edge (psi) =	560	575	750
Compression Perp. To Grain <sup>2</sup> - Flatwise	F <sub>c perp</sub> flat (psi) =	500	500	500
Compression Parallel to Grain	F <sub>c para</sub> (psi) =	1,950	1,950	2,750
Tension Parallel to Grain <sup>5</sup>	F <sub>t</sub> (psi) =	1,500	1,500	1,900
MOE for stability calculations <sup>2</sup>	E <sub>min</sub> (psi) =	660,660	762,300	1,016,400

- (1) These allowable design stresses apply to dry service conditions.
- (2) No increase is allowed for duration of load.
- (3) For depths other than 12" multiply  $F_h$  by  $(12/d)^{1/8}$  where d=depth of member (inches).
- (4) A factor of 1.04 may be applied for repetitive members as defined in the National Design Specification for Wood Construction.
- (5) Tensile stress is based on a 4-foot gage length. For greater lengths, multiply F, by  $(4/L)^{1/9}$  where L = length in feet. For lengths less than 4-feet, use the published value.

# Stair Stringer Terms and Definitions

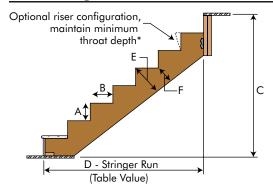

A - Step Rise: Vertical rise of a single step B - Step Run: Horizontal length of a single step C - Total Rise: Vertical distance from top of finished framing on low end to

top of finished framing on high end D - Stringer Run: Out-to-out horizontal span of stringer (table value)

E - Gross Stringer Depth: Depth of stringer before steps are cut

F - Throat Depth\*: Net stringer depth after steps are cut (measured

perpendicular to bottom edge of stringer)

• One angle per stringer required for 9-1/2"


Two angles per stringer required for 14"


and 11-7/8" deep stringers.

and 16" deep stringers.

	*Minimum Throat Depth						
Stringer Depth	Residential - 7-3/4" rise & 11" run	Commercial - 7" rise & 11" run					
9-1/2" LVL	3-1/8"	3-9/16"					
11-7/8" LVL	5-1/2"	5-15/16"					
14" LVL	7-5/8″	8-1/16"					
16" LVL	9-5/8"	10-1/16"					

# Stair Stringer Configurations

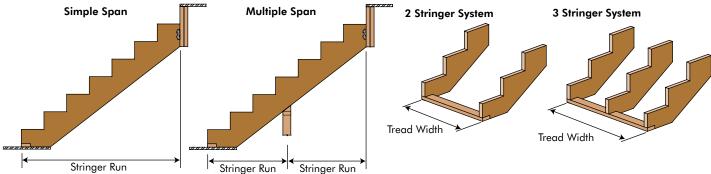

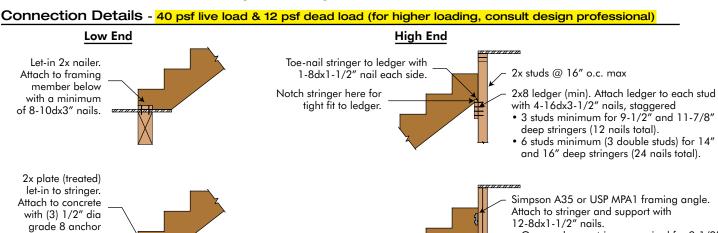

NOTE: Only use fasteners approved for use with the corresponding wood treatment.


- Moisture barrier

bolts.

# The Roseburg Framing System®

The Roseburg Framing System® consists of: RFPI® Joists used in floor and roof construction; RigidLam® LVL which is used for headers, beams, columns, studs and stair stringers; and RigidRim® Rim Board. All of the components are engineered to the industry's highest standards to help contractors build solid, durable, and better performing framing systems compared to ordinary dimension lumber.


#### SOLID SAWN FLANGE RFPI® JOISTS

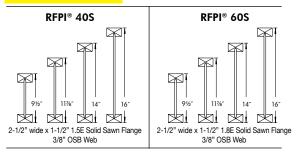



#### **RIGIDRIM® RIM BOARD DESIGN PROPERTIES**


	Thickness	Vertical Load (PLF)	Horizontal Load (PLF)	Post Load (Pounds)	Lag Screw (1/2") (Pounds)
OSB Rim Board	1-1/8"	4400	180 (8d box or common)	3500	350
OSB Rim Board Plus	1-1/8"	4850	200 (8d box or common)	3500	350
OSB Rim Board Seismic	1-1/4"	5700	240 (8d common)	5900	400
1.3E LVL Rim Board	1-1/2"	4900	215 (8d box or common)	3500	400


# LVL FLANGE RFPI® JOISTS

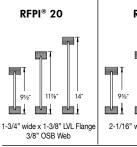



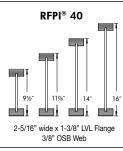

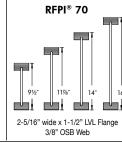

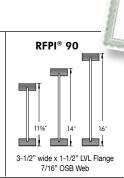


RFPI® JOIST ALLOWABLE SPANS -	40 PSF LIVE LOAD A	AND 10 PSF DEAD LOAD
-------------------------------	--------------------	----------------------


Joist	Joist	40/10 SIMPLE SPAN				40/10 MULTIPLE SPAN			
Depth	Series	12" o.c.	16" o.c.	19.2" o.c.	24" o.c.	12" o.c.	16" o.c.	19.2" o.c.	24" o.c.
	RFPI® 20	17' - 2"	15' - 9"	14' - 10"	13' - 10"	18' - 9"	17' - 1"	16' - 2"	13' - 5"
	RFPI® 40S	18' - 0"	16' - 5"	15' - 6"	14' - 6"	19' - 7"	17' - 11"	16' - 4"	14' - 7"
9-1/2"	RFPI® 400	18' - 0"	16' - 5"	15' - 6"	14' - 6"	19' - 7"	17' - 10"	16' - 10"	15' - 9"
9-1/2"	RFPI® 40	18' - 7"	16' - 11"	16' - 0"	14' - 11"	20' - 2"	18' - 5"	17' - 5"	16' - 2"
	RFPI® 60S	18' - 11"	17' - 4"	16' - 4"	15' - 3"	20' - 8"	18' - 10"	17' - 9"	16' - 6"
	RFPI® 70	19' - 9"	18' - 0"	17' - 0"	15' - 10"	21' - 6"	19' - 7"	18' - 5"	17' - 2"
	RFPI® 20	20' - 6"	18' - 9"	17' - 9"	16' - 5"	22' - 4"	20' - 2"	16' - 9"	13' - 5"
	RFPI® 40S	21' - 5"	19' - 7"	18' - 6"	16' - 8"	23' - 5"	20' - 5"	18' - 7"	16' - 7"
	RFPI® 400	21' - 5"	19' - 7"	18' - 6"	17' - 3"	23' - 4"	21' - 4"	20' - 1"	17' - 9"
11-7/8"	RFPI® 40	22' - 1"	20' - 2"	19' - 0"	17' - 9"	24' - 1"	22' - 0"	20' - 8"	19' - 3"
	RFPI® 60S	22' - 7"	20' - 8"	19' - 6"	18' - 2"	24' - 8"	22' - 6"	21' - 2"	19' - 7"
	RFPI® 70	23' - 7"	21' - 6"	20' - 3"	18' - 10"	25' - 8"	23' - 5"	22' - 0"	18' - 6"
	RFPI® 90	26' - 6"	24' - 1"	22' - 8"	21' - 1"	28' - 10"	26' - 3"	24' - 8"	22' - 11"

Joist	Joist		40/10 SIN	IPLE SPAN		40/10 MULTIPLE SPAN			
Depth	Series	12" o.c.	16" o.c.	19.2″ o.c.	24" o.c.	12" o.c.	16" o.c.	19.2" o.c.	24" o.c.
	RFPI® 20	23' - 4"	21' - 4"	20' - 2"	18' - 6"	25' - 5"	22' - 7"	20' - 7"	16' - 7"
	RFPI® 40S	24' - 4"	22' - 3"	20' - 6"	18' - 4"	25' - 11"	22' - 5"	20' - 5"	18' - 3"
	RFPI® 400	24' - 4"	22' - 3"	21' - 0"	19' - 7"	26' - 7"	24' - 3"	22' - 3"	17' - 9"
14"	RFPI® 40	25' - 2"	22' - 11"	21' - 8"	20' - 2"	27' - 5"	25' - 0"	23' - 7"	19' - 9"
	RFPI® 60S	25' - 9"	23' - 6"	22' - 2"	20' - 8"	28' - 0"	25' - 7"	24' - 1"	19' - 9"
	RFPI® 70	26' - 10"	24' - 5"	23' - 0"	21' - 5"	29' - 3"	26' - 7"	23' - 2"	18' - 6"
	RFPI® 90	30' - 1"	27' - 5"	25' - 9"	23' - 11"	32' - 10"	29' - 10"	28' - 1"	26' - 0"
	RFPI® 40S	26' - 11"	24' - 3"	22' - 1"	19' - 9"	27' - 11"	24' - 2"	22' - 0"	19' - 8"
	RFPI® 400	27' - 0"	24' - 8"	23' - 4"	20' - 10"	29' - 6"	26' - 4"	22' - 3"	17' - 9"
16"	RFPI® 40	27' - 10"	25' - 5"	24' - 0"	22' - 4"	30' - 4"	27' - 8"	24' - 9"	19' - 9"
10"	RFPI® 60S	28' - 6"	26' - 0"	24' - 7"	22' - 11"	31' - 1"	28' - 4"	24' - 9"	19' - 9"
	RFPI® 70	29' - 9"	27' - 1"	25' - 6"	23' - 1"	32' - 5"	27' - 10"	23' - 2"	18' - 6"
	RFPI® 90	33' - 4"	30' - 4"	28' - 7"	26' - 7"	36' - 5"	33' - 1"	31' - 1"	26' - 7"

#### **AVAILABLE RIGIDLAM® LVL SIZES**

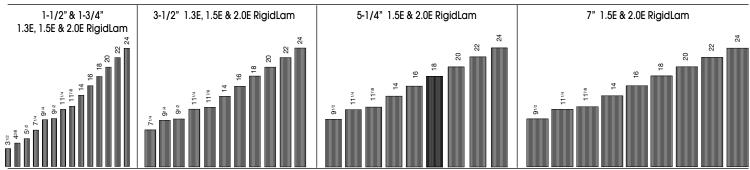

Not all sizes available in all markets. Contact your Roseburg representative for availability. The location and contact information for your regional EWP representative can be found on our company website www.roseburg.com or by calling (800) 347-7260.

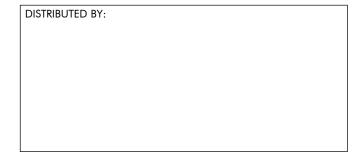



10599 Old Hwy 99 South | Dillard Oregon 97432 tel 800-347-7260 | fax 541-679-2612 web www.Roseburg.com | email ewpsales@rfpco.com